


AKAI

HEAD DE - MAGNETIZER

MODEL AH-6

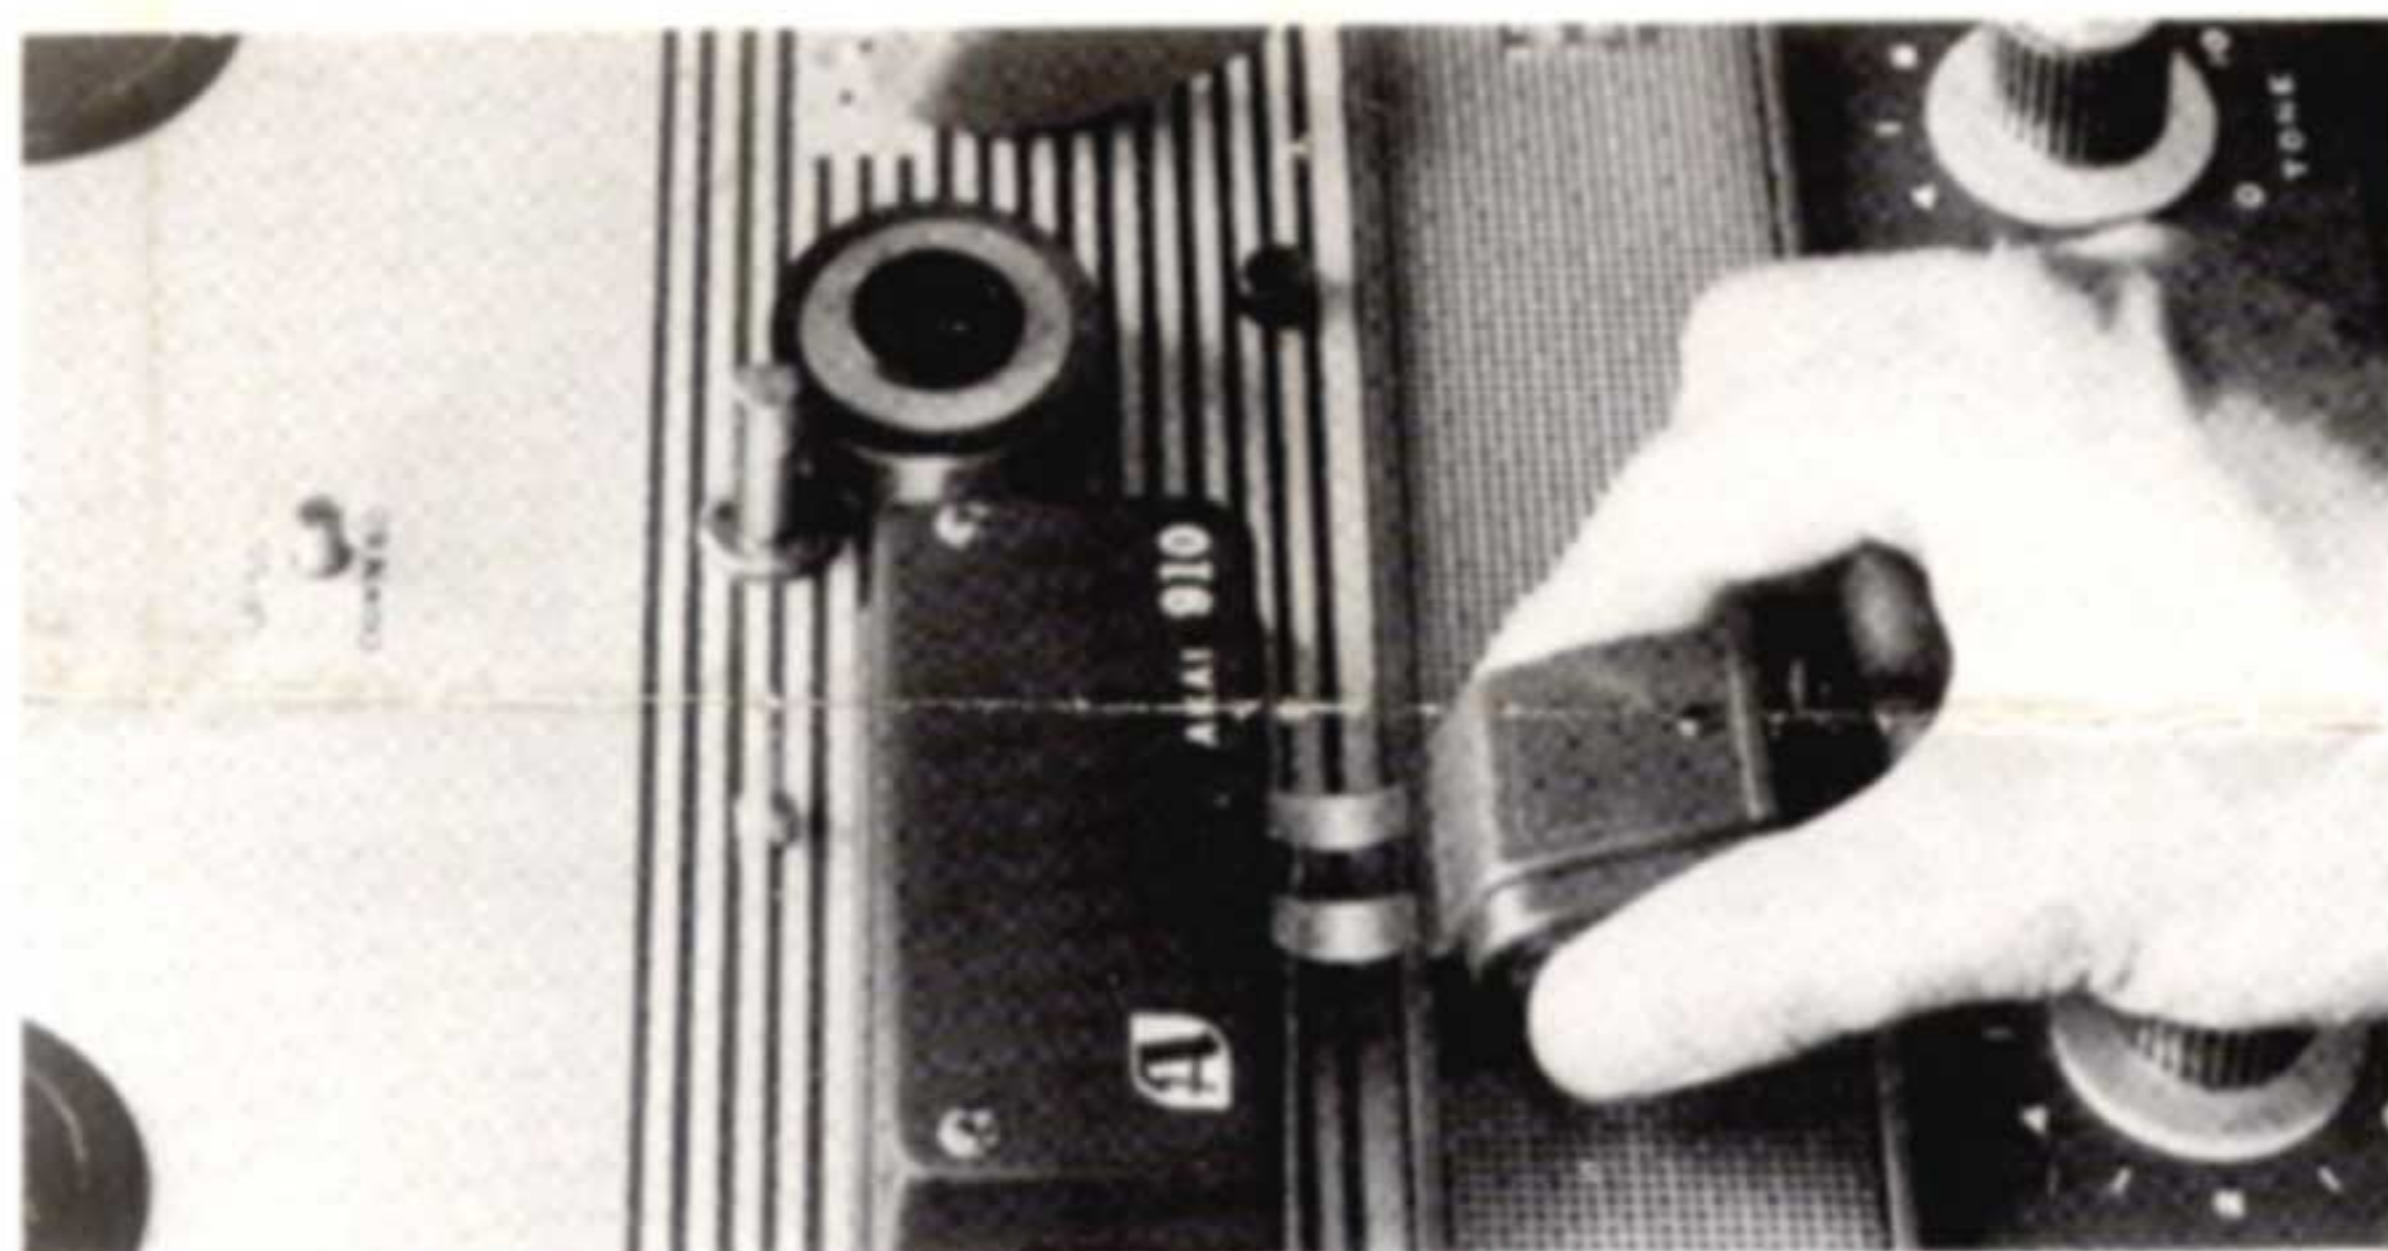

Model AH-6 is a handy portable Head De-magnetizer and it can be used to remove the magnetism from Erase, Record/Playback Heads.

As you aware that the head of the tape recorder easily get magnetized by using it for long time and this magnetism on the head will ruin your pre-recorded tapes in many cases.

It is, therefore, recommended to use the model AH-6 Head De-magnetizer for demagnetizing the head as often as possible for your pre-recorded tapes so that you can enjoy the true and real music for many hours without suffering from the hissing noise.

SPECIFICATION

Power Requirement: 100/117/220 Volts, 50/60 Cycles.

Power Consumption: 100V 0.04A/220V 0.05A

HOW TO USE:

1. After inserted the cord plug into the consent available, give a slight pressure to the "PUSH BUTTON SWITCH" which is located at the side of the de-magnetizer. Then the neon lamp on the de-magnetizer will be lighten so that you will aware the de-magnetizer is operating.
2. Get the edges of the head de-magnetizer closer to the surface of the head and make small circulation for several times and then move it away from the head gradually but never quickly.
3. To avoid making scratch on the surface of the head, it is suggested to cover both edge of the head de-magnetizer with a sort of masking tape.
4. When you switch on or off, keep the head de-magnetizer away fully from the head of the tape recorder.
5. If the head de-magnetizer is used for a long time, it will be overheated. Please limit your time within 2 minutes.
6. When de-magnetize the head, it is also recommended to apply same to the "TAPE GUIDE" and the "CAPSTAN SHAFT."