



AKAI


RECIVER WITH MONITOR

Model:
ATV-350R


SERVICE MANUAL

ATV-350R Maintenance Manual


1. Repairing Procedures for No sound, No Picture and No Light

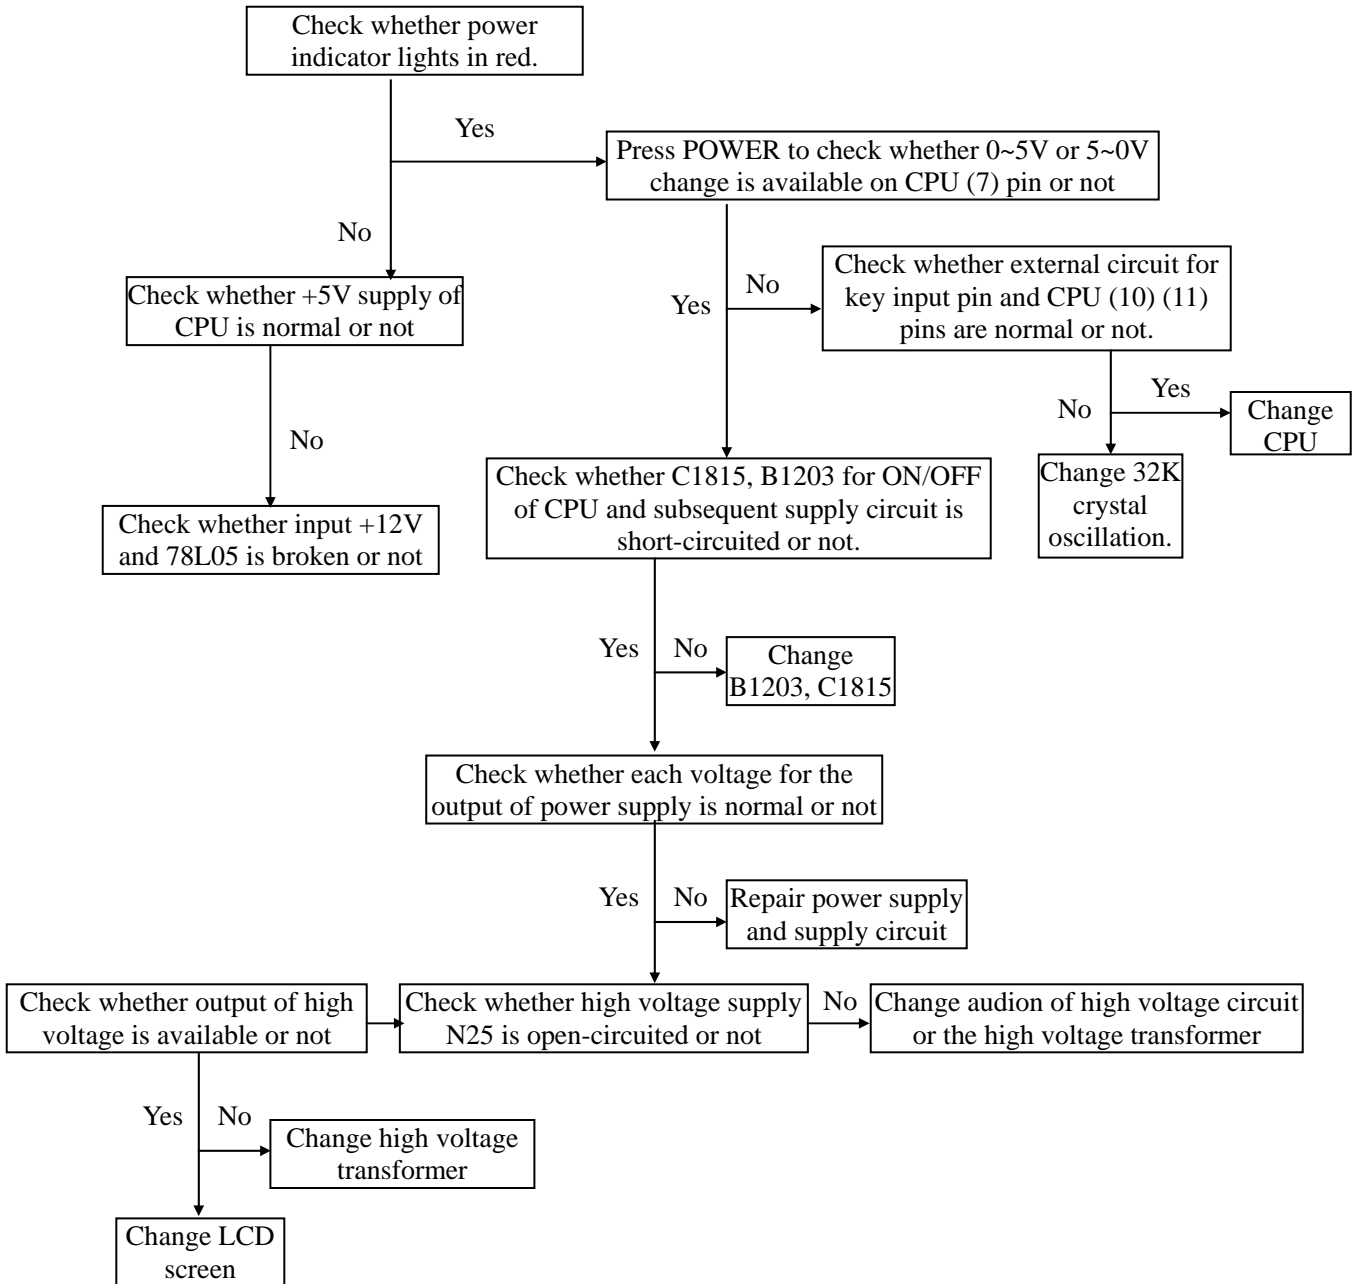


2. Repairing Procedures for Inferior Color

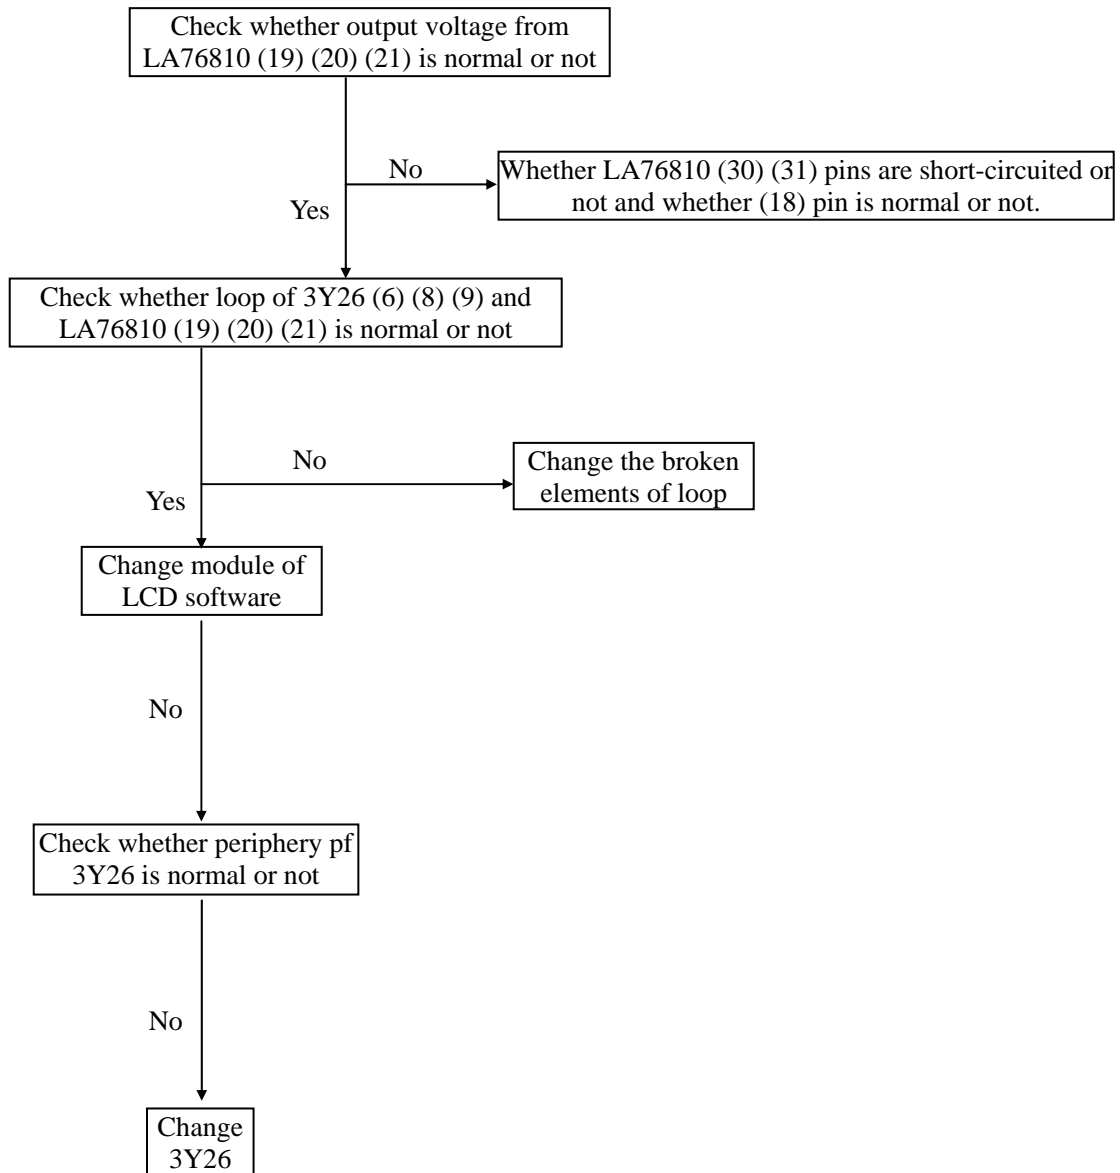


3. With Sound, With Light and Black Screen

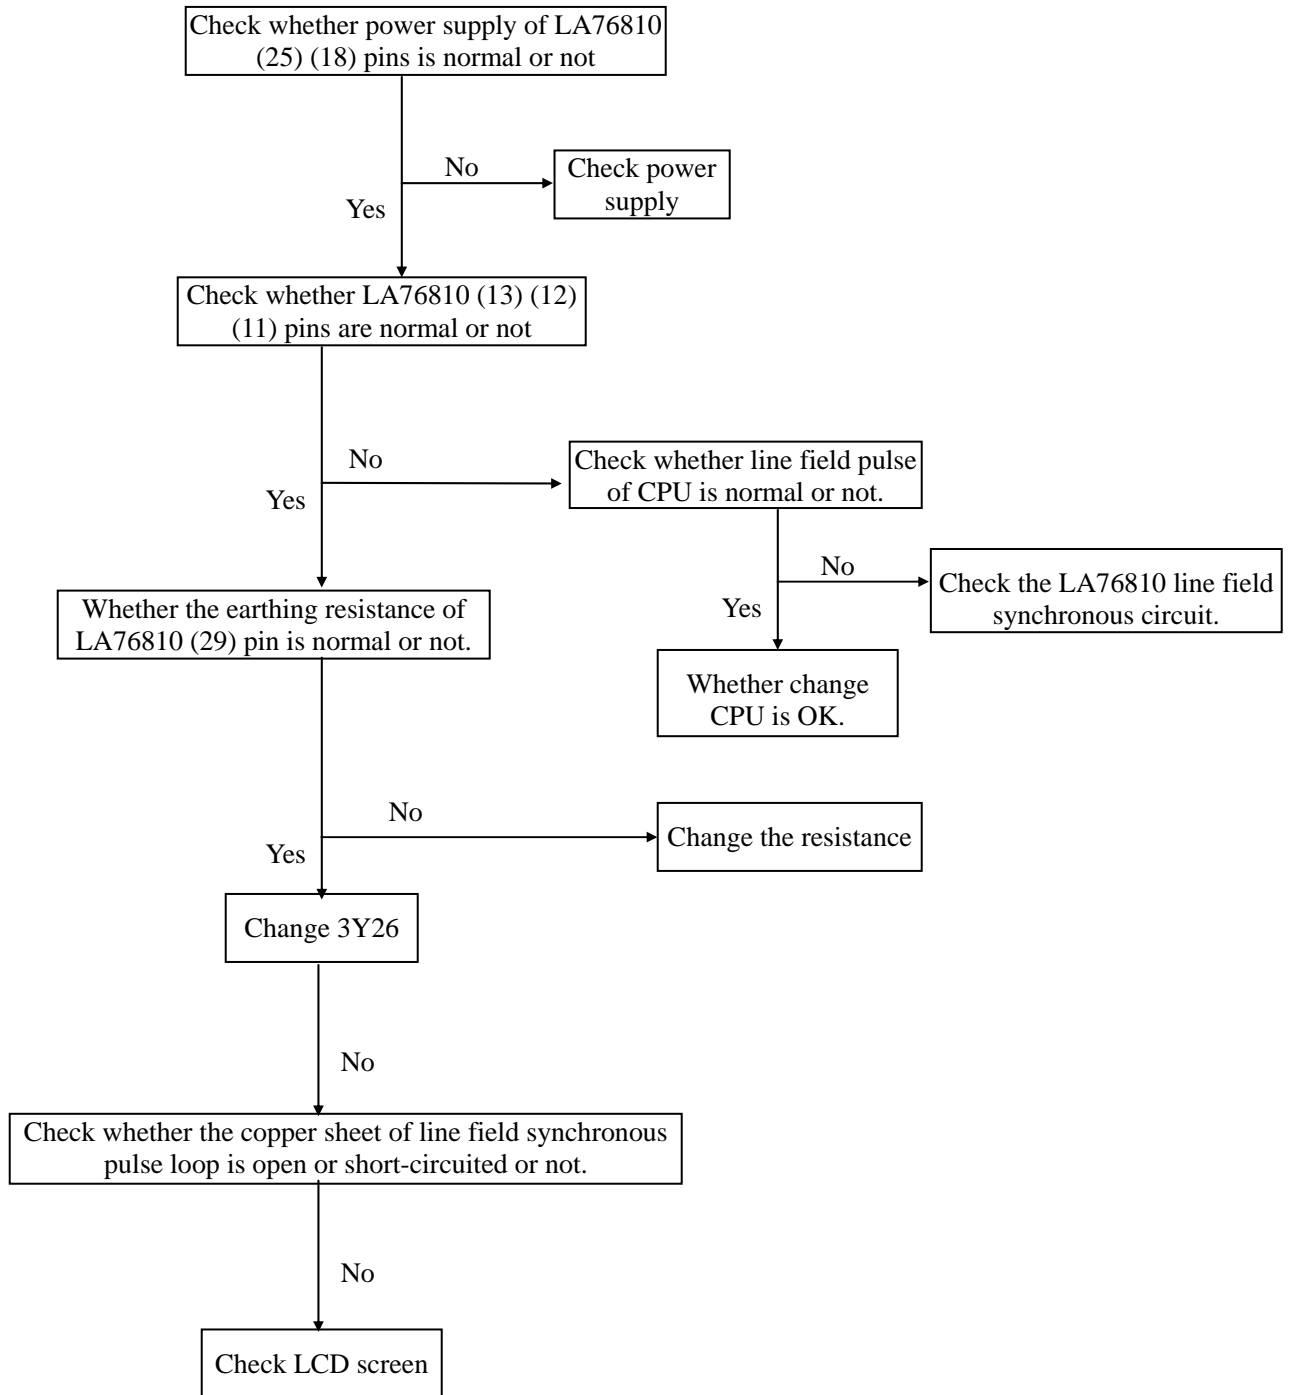


4. Repairing Procedures for Line Field Asynchronization

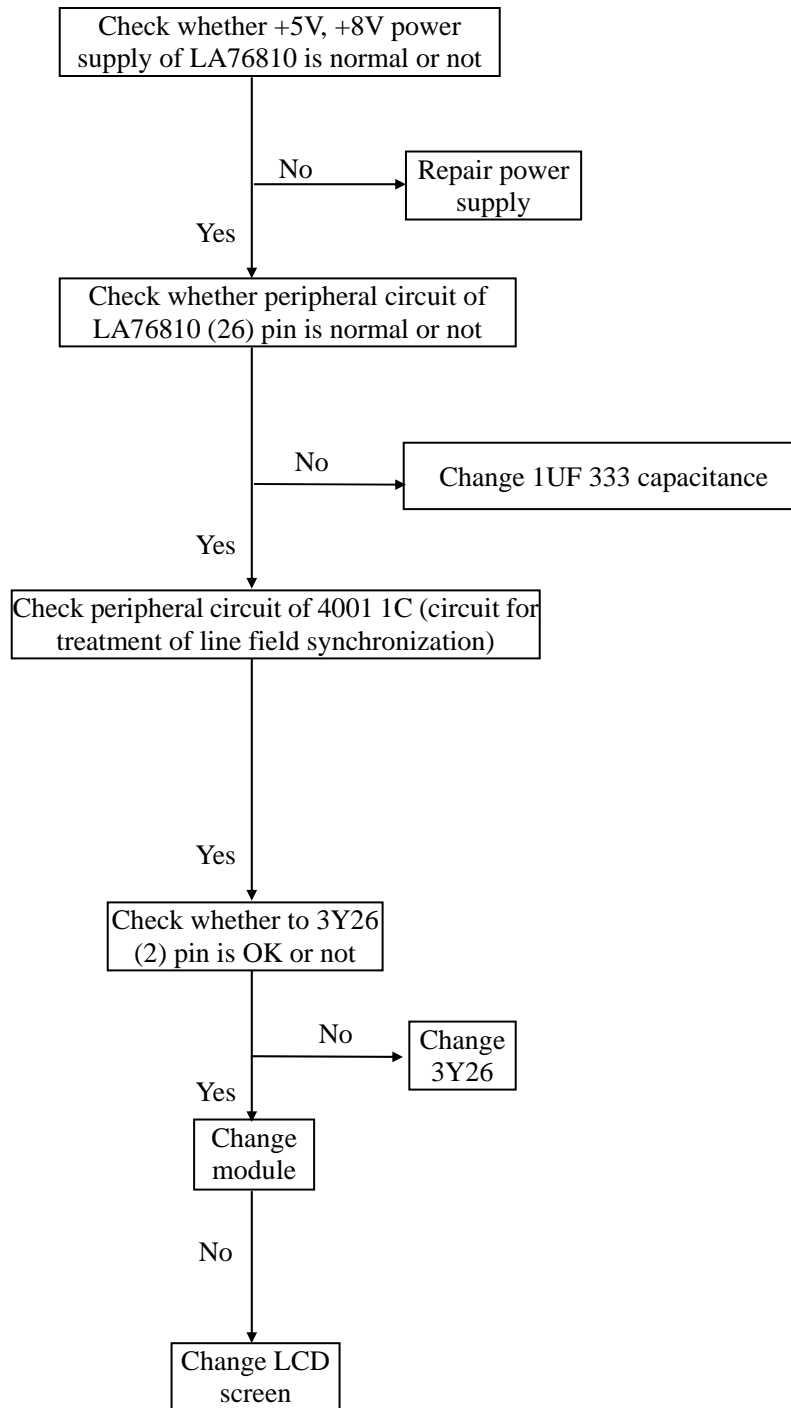


5. Repairing Procedures for White Light

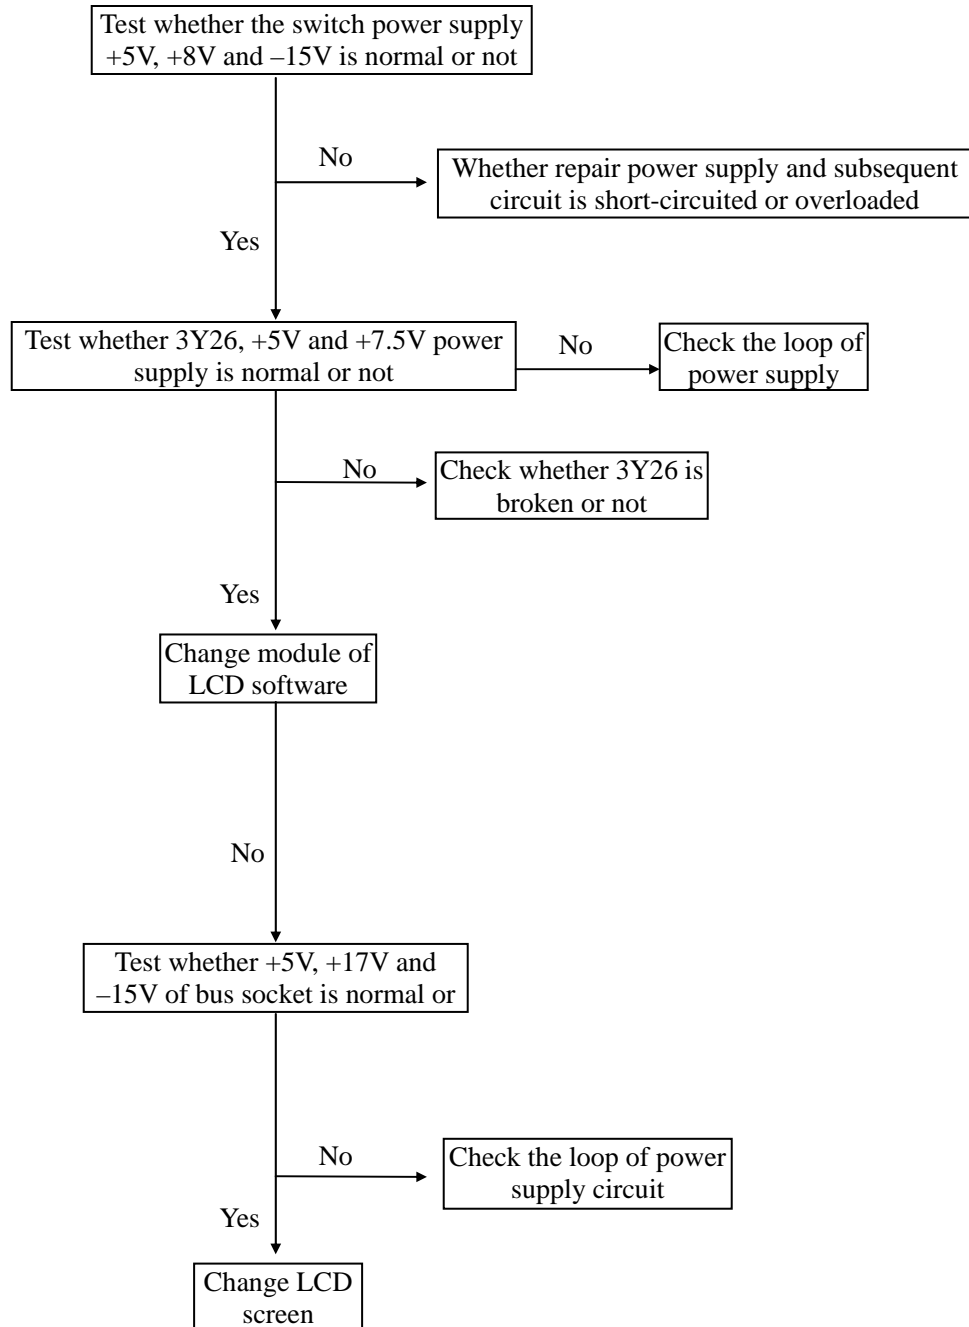


6. No Signal

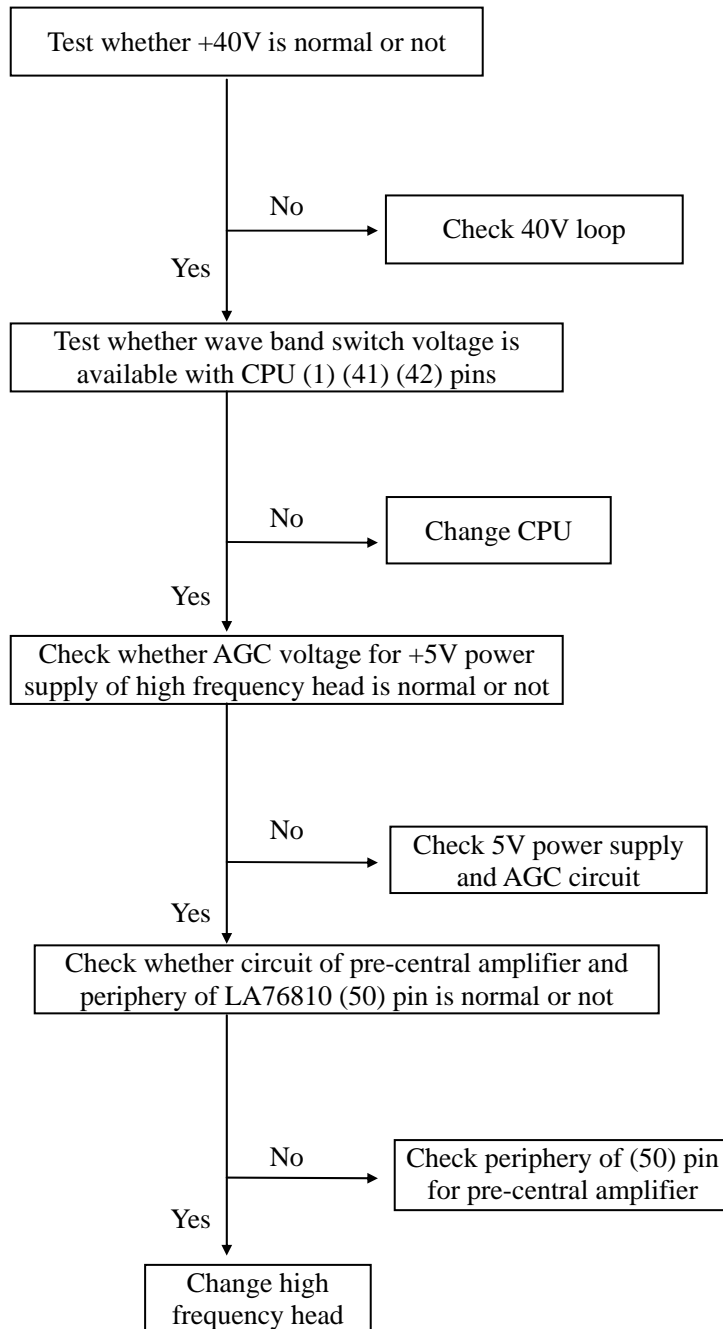


7. No Storage of Program

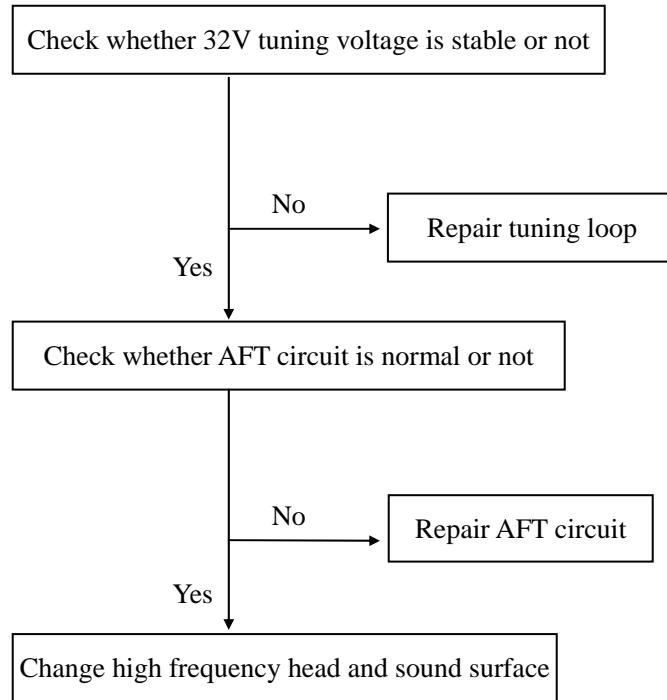


8. With Picture, No or Low Sound and Distortion

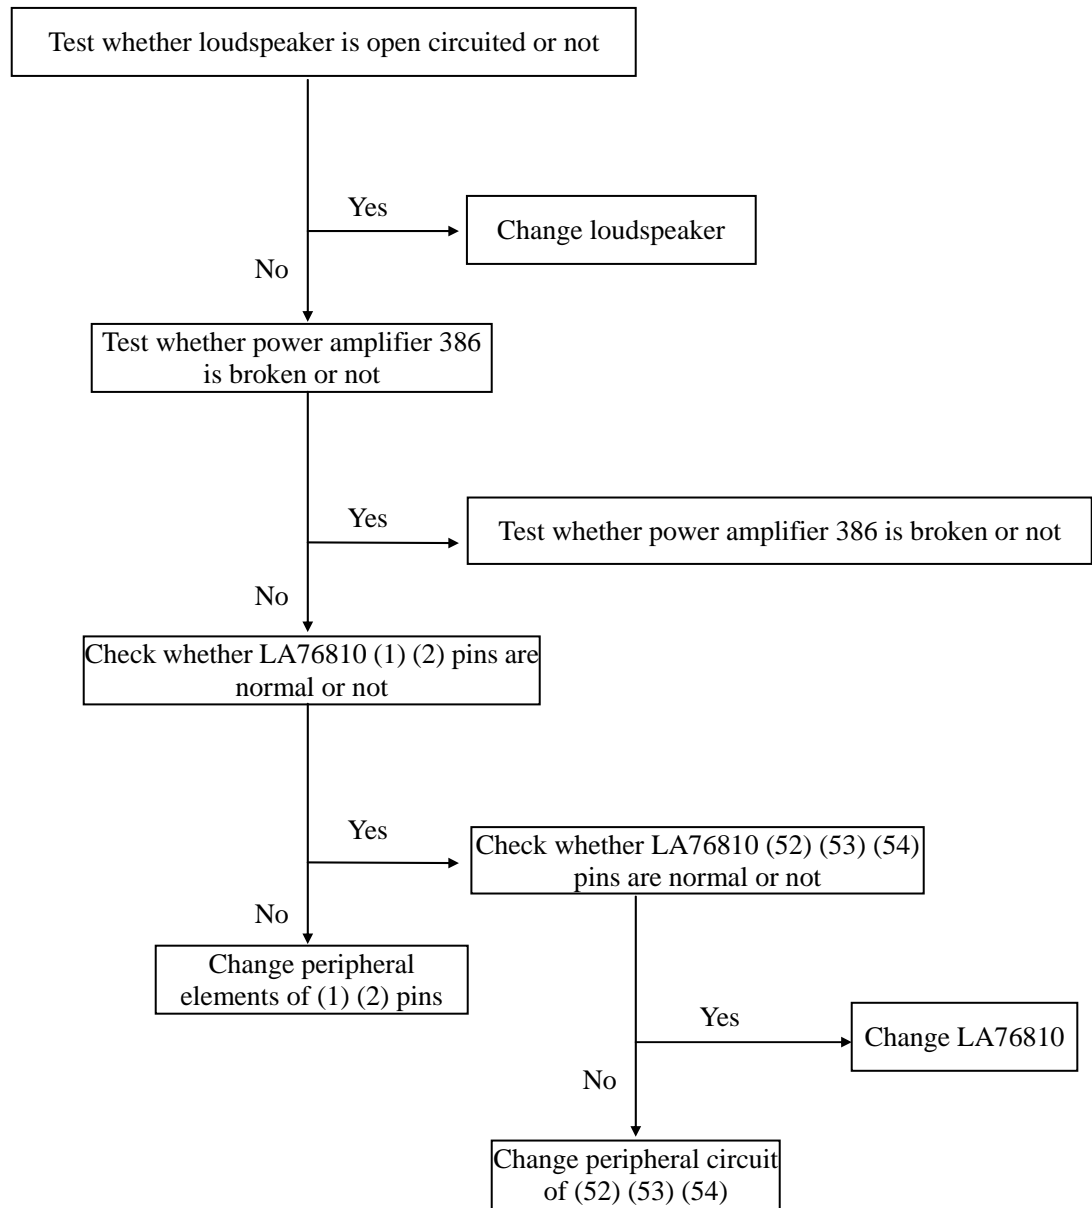


9. Dark Light

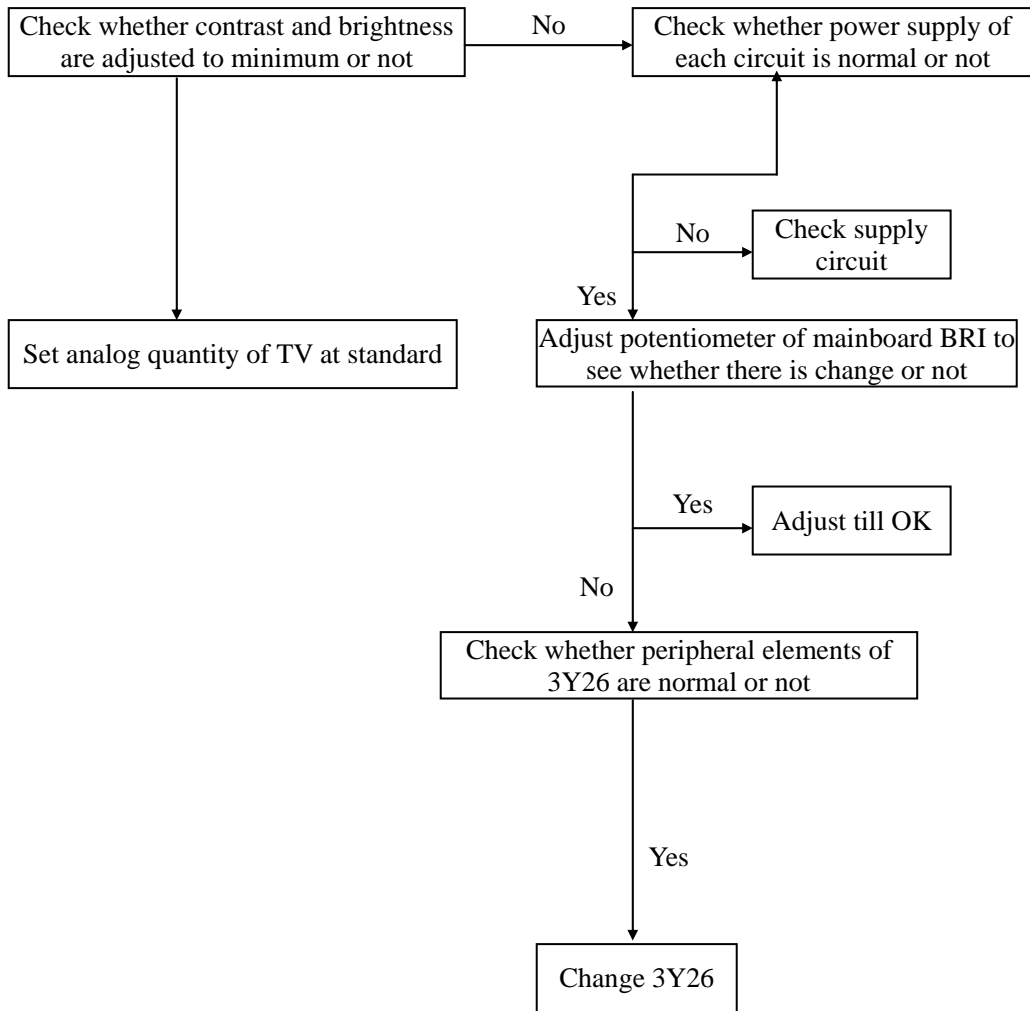


10. With Picture, With Sound, No Character or Inferior Color

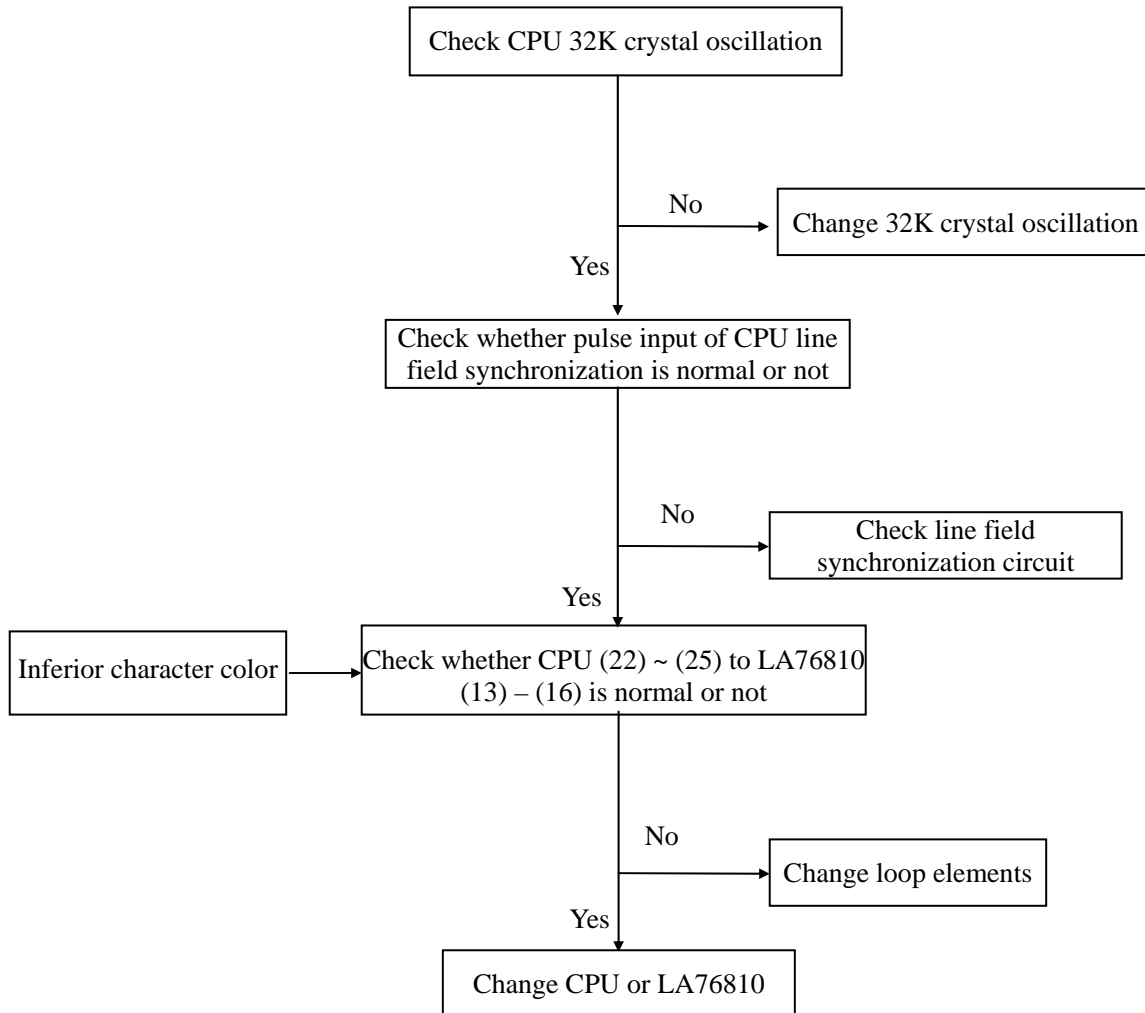


11.No Picture or No Sound in AV

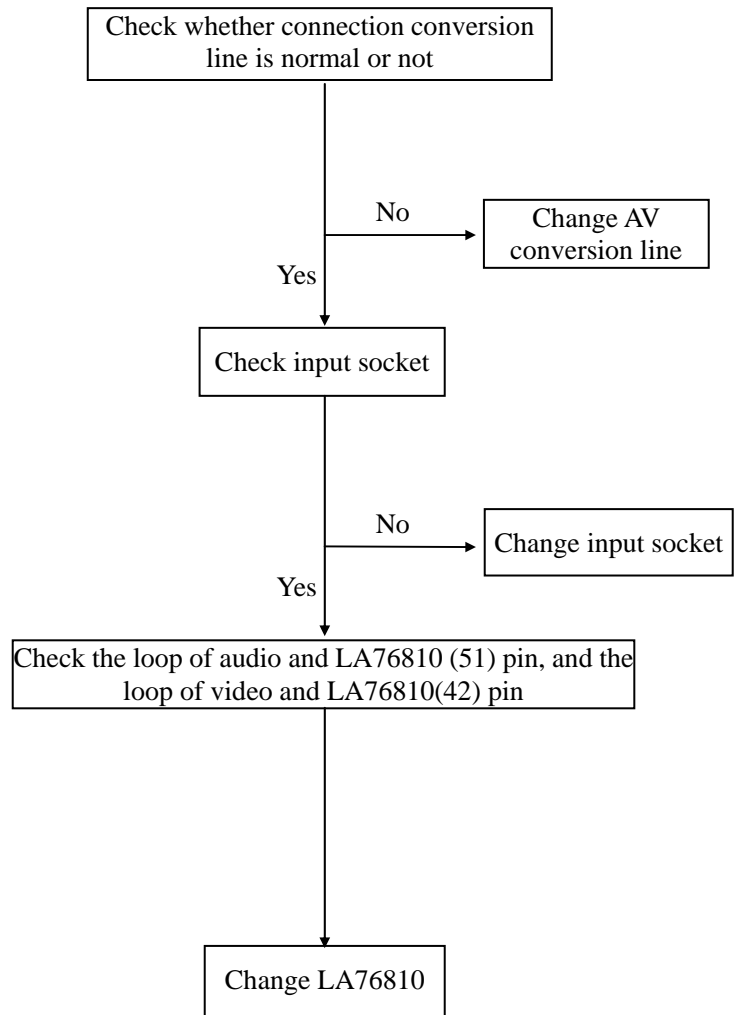


12. Without radio

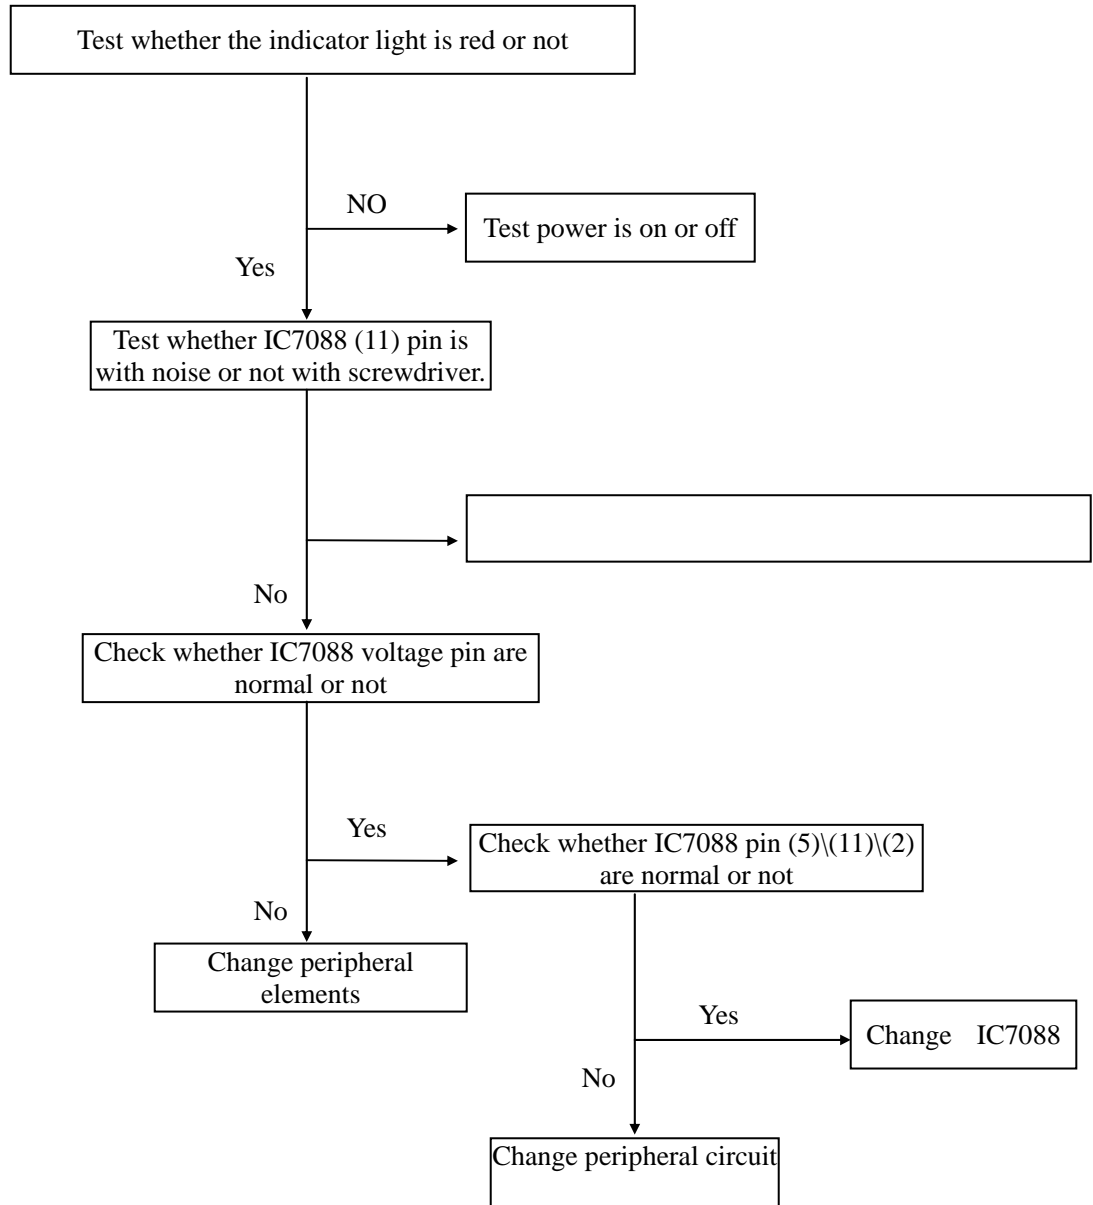


13. Battery box can not charge

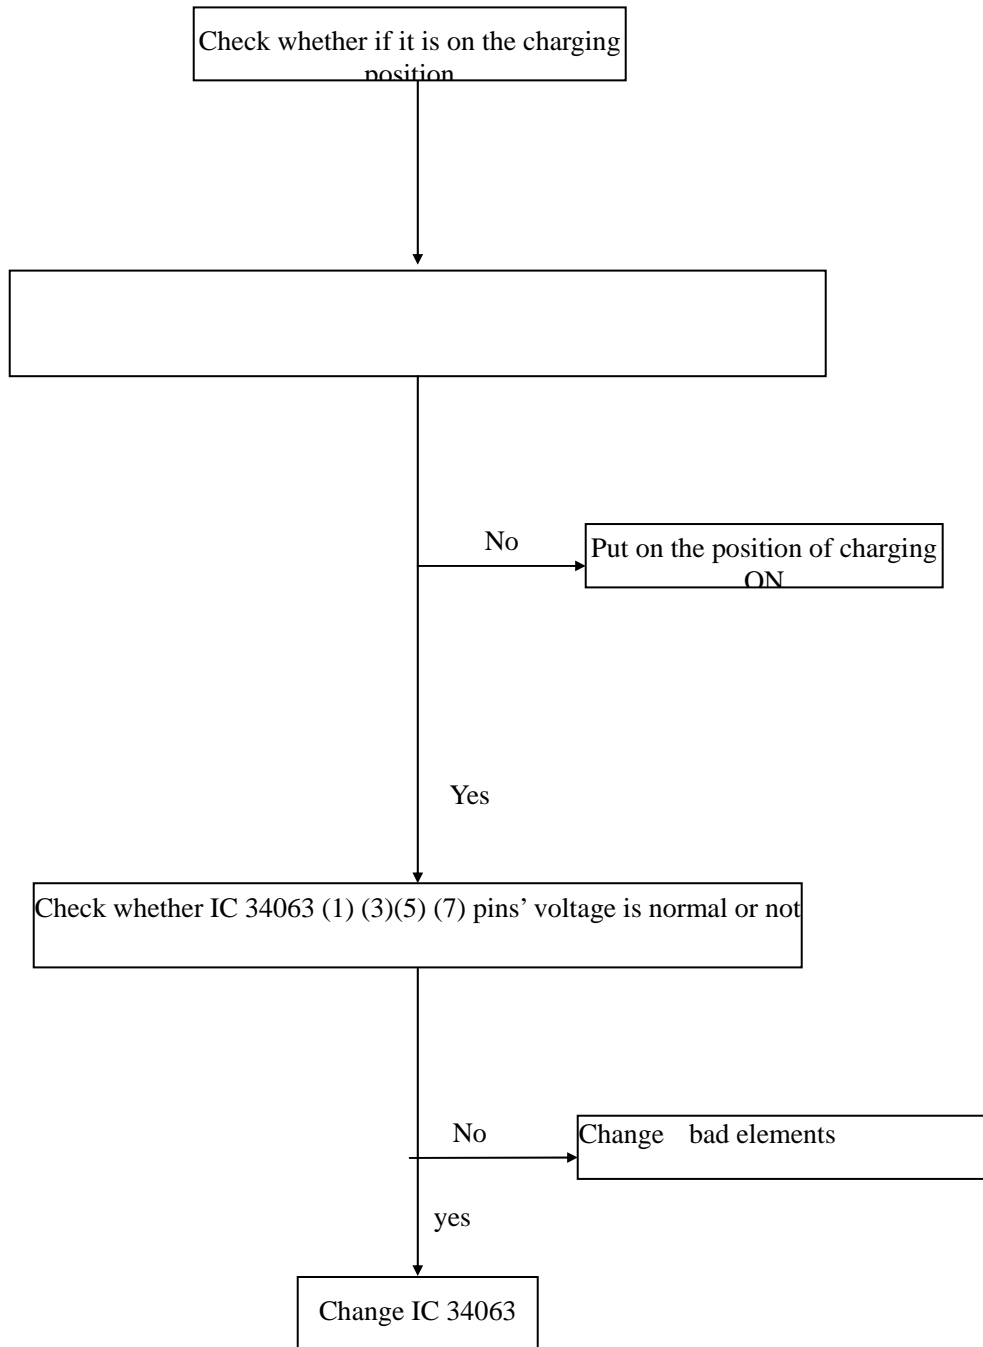

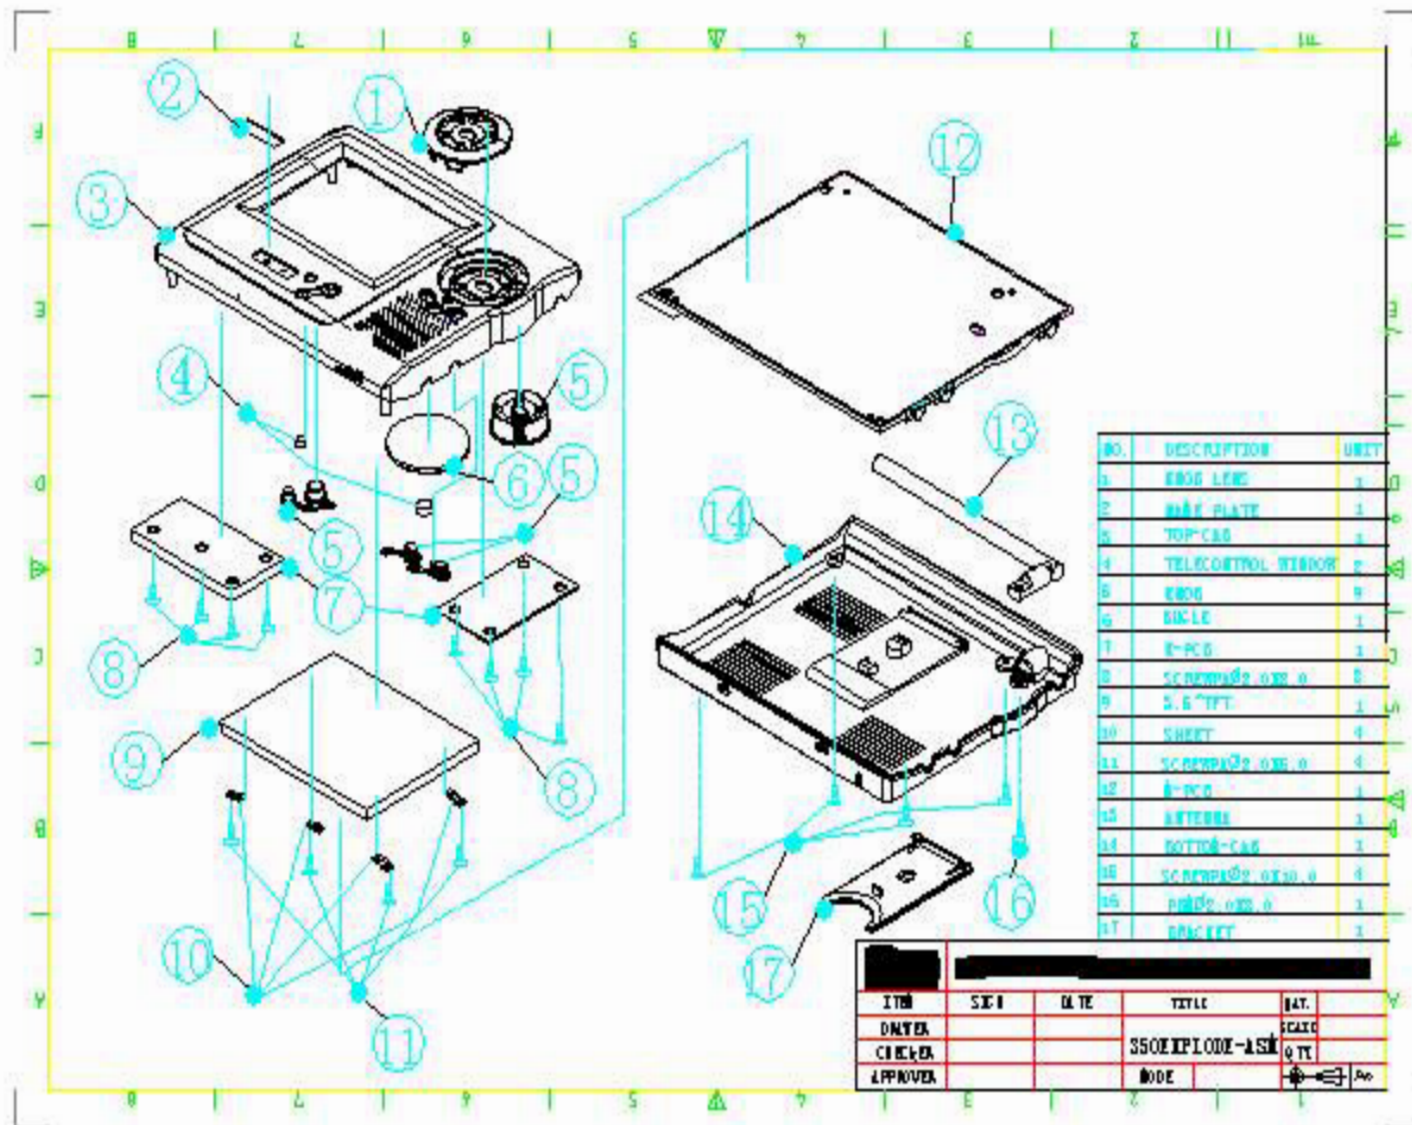

NO.	DESCRIPTION	UNIT
1	EDGE LEAD	1
2	BACK PLATE	1
3	TOP-CAP	1
4	TELECONTROL WIRE	2
5	EDGE	4
6	WAL	1
7	PCB	1
8	SCREENPADS 0.020 0	8
9	3.6" TFT	1
10	SHIELD	1
11	SCREENPADS 0.020 0	4
12	PCB	1
13	ANTENNA	1
14	BOTTOM-CAP	1
15	SCREENPADS 0.020 0	4
16	WAL	1
17	BACKLET	1

[REDACTED]				
ITM	REV	DATE	TITLE	DATE
DMYER			SSOEXPLODE-ASM	07/01
CHECKER				
APPROVER			NO	

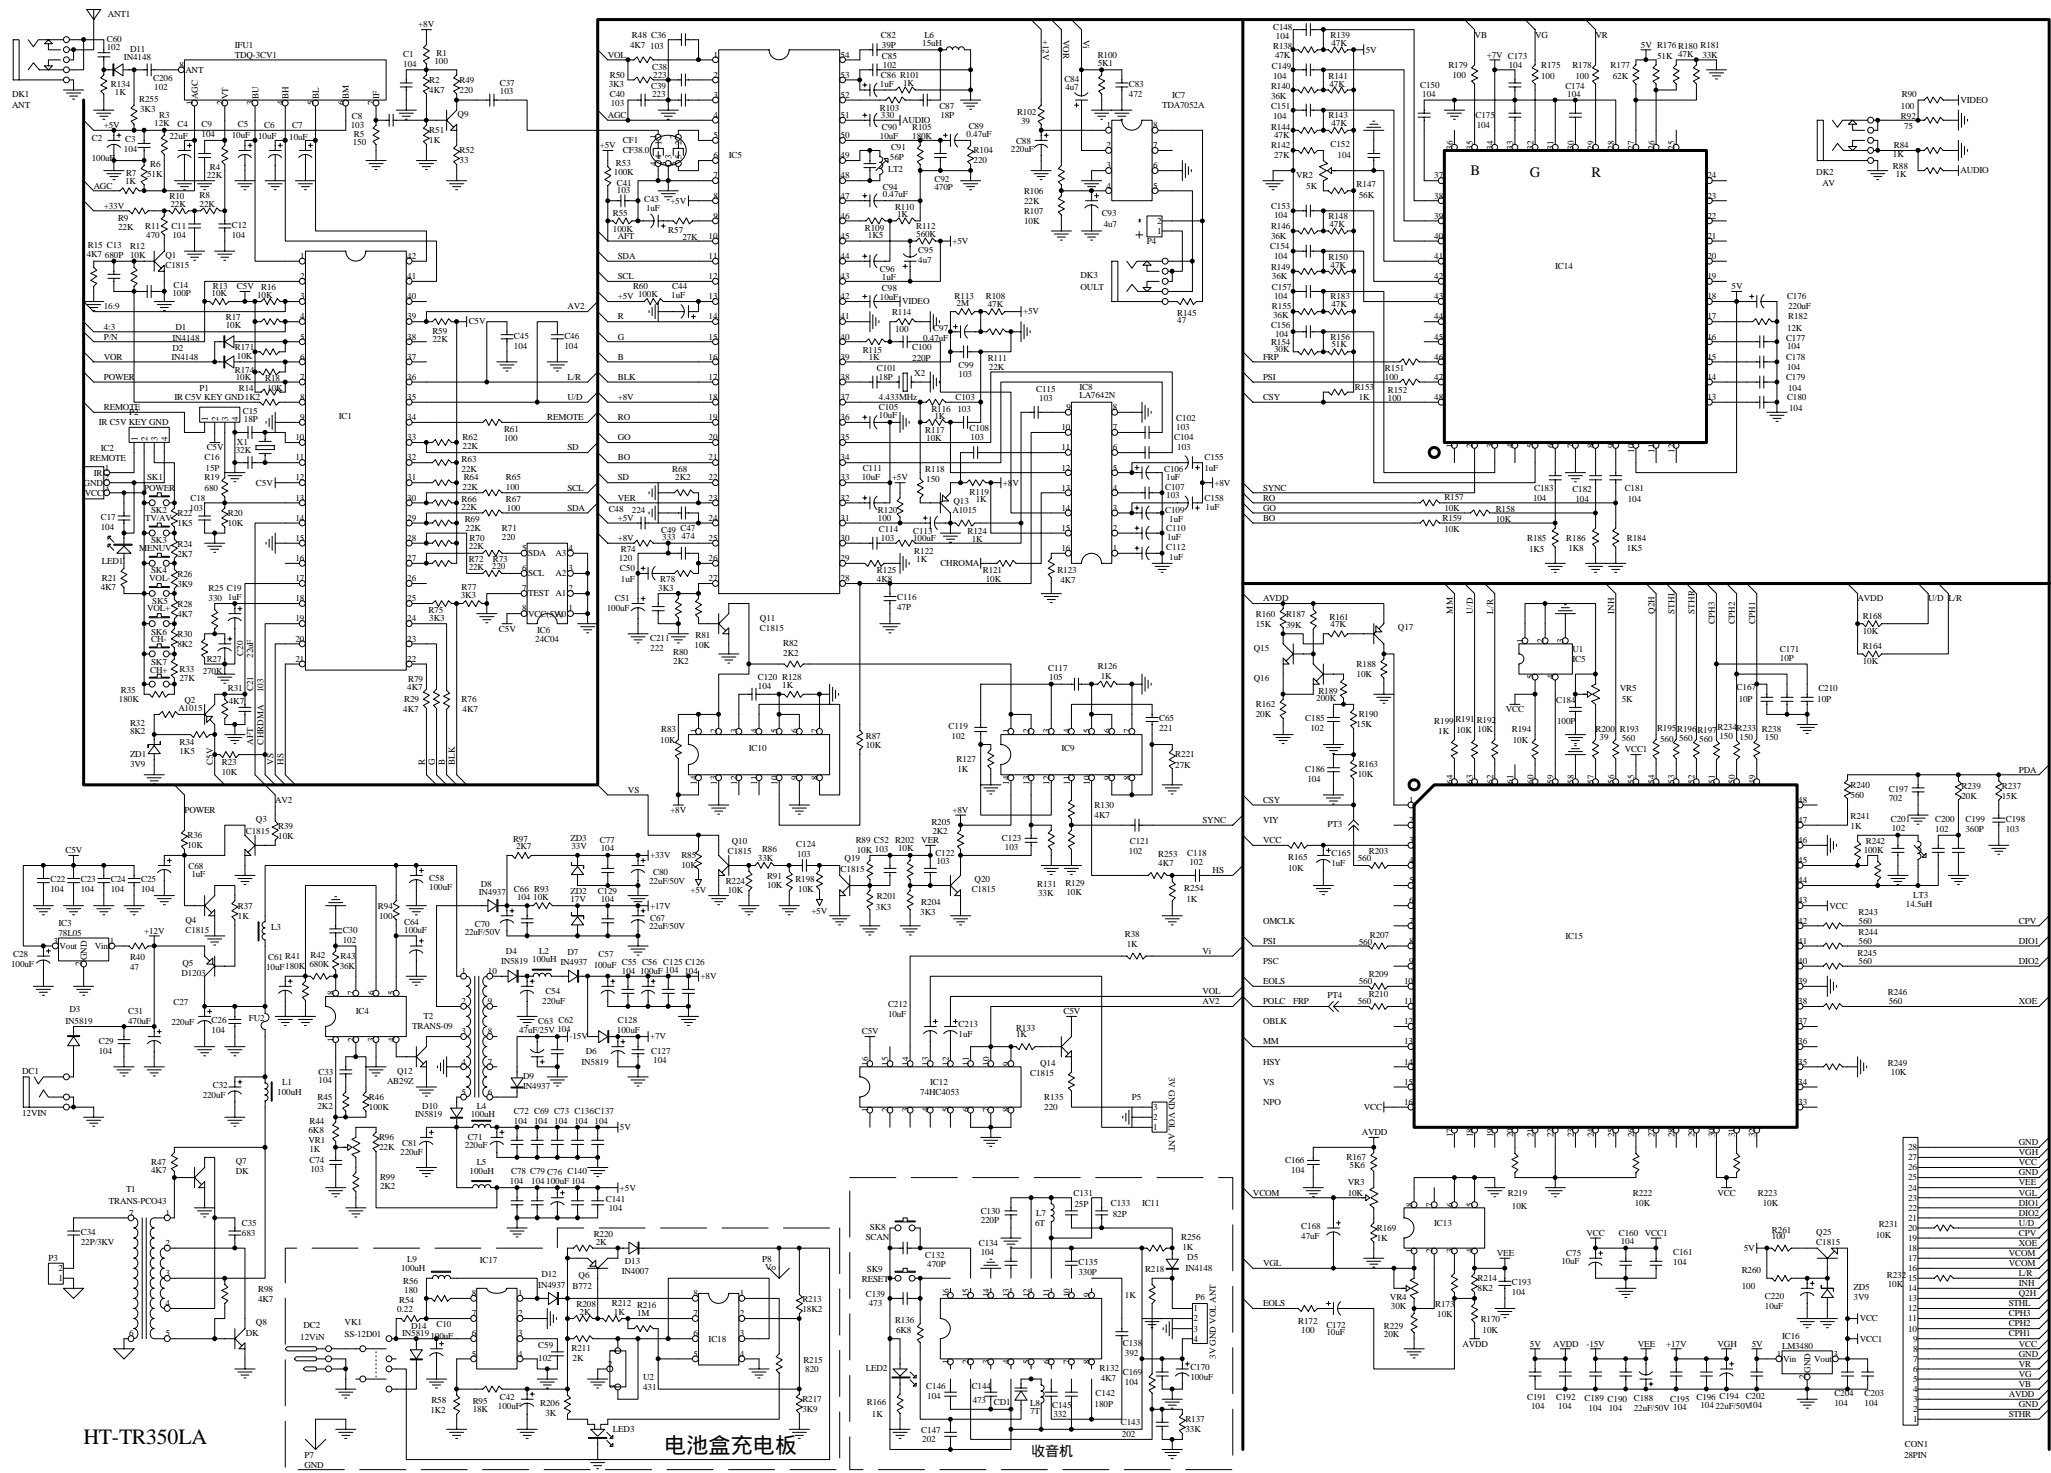


HT-TR350LA

电池盒充电板

收音机

28	GND
27	VGH
26	VCC
25	GND
24	VCC
23	VEE
22	LD
21	BDI
20	UD
19	DD2
18	NBE
17	VCCM
16	VCCM
15	ISH
14	STH
13	CPV
12	STH
11	CPH1
10	CPH2
9	VCC
8	GND
7	VG
6	VH
5	AVDD
4	GND
3	STH
2	GND
1	CON1

CON1 28PIN

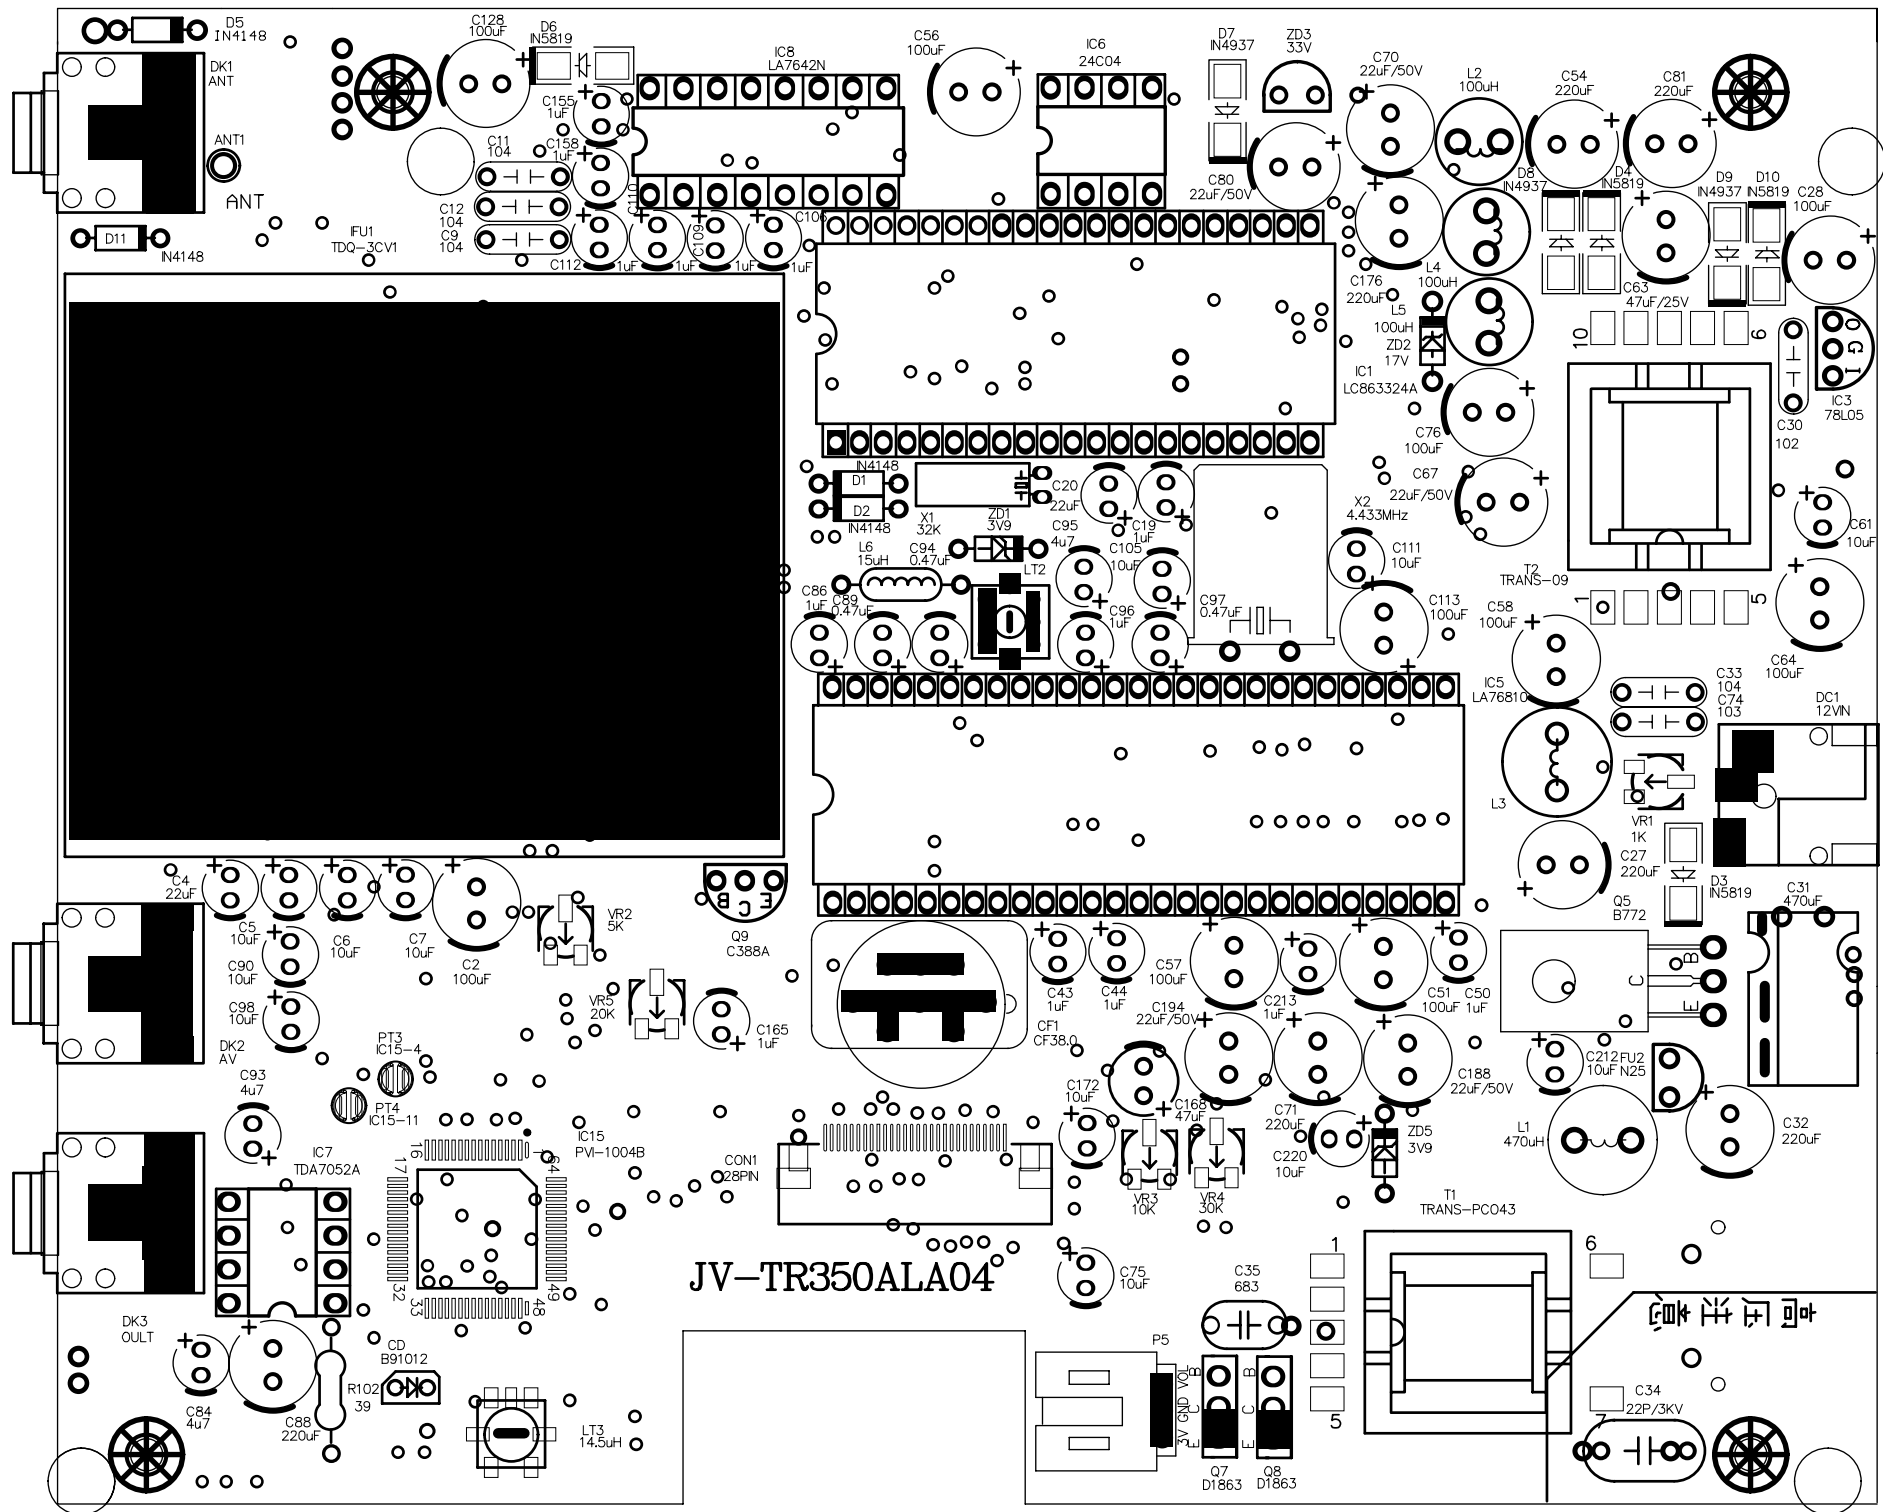

JV-TR350ALA04

