

WARNING

To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

Operator's Manual





This Akai Tape Deck Selector lets you directly connect up to 4 tape decks for tape dubbing and monitoring. You can also connect such component as a mixing amplifier, graphic equalizer or noise reduction system for various recording and playback.

PRECAUTIONS -

- Touching the plug with wet hands risks dangerous electric shocks.
 Always pull out by the plug and never the cord.
- Only let a qualified professional repair or reassemble the equipment.
- Never allow a child to put anything, especially metal into this equipment. Malfunction may occur.
- 4. If water is spilled on this equipment, disconnect and call your dealer.
- Make sure the equipment is well ventilated and away from direct sunlight.
- Keep away from heat (stoves, etc.) to avoid damage to the external surface and internal circuits.
- 7. Avoid spray-type insecticides which will damage the equipment and may ignite suddenly.
- 8. To avoid damaging the finish never use alcohol, paint thinner or other similar chemicals.
- Always place the equipment on a flat and solid surface.
- Please read this manual in its entirely and keep it handy for further reference.

CONTROLS

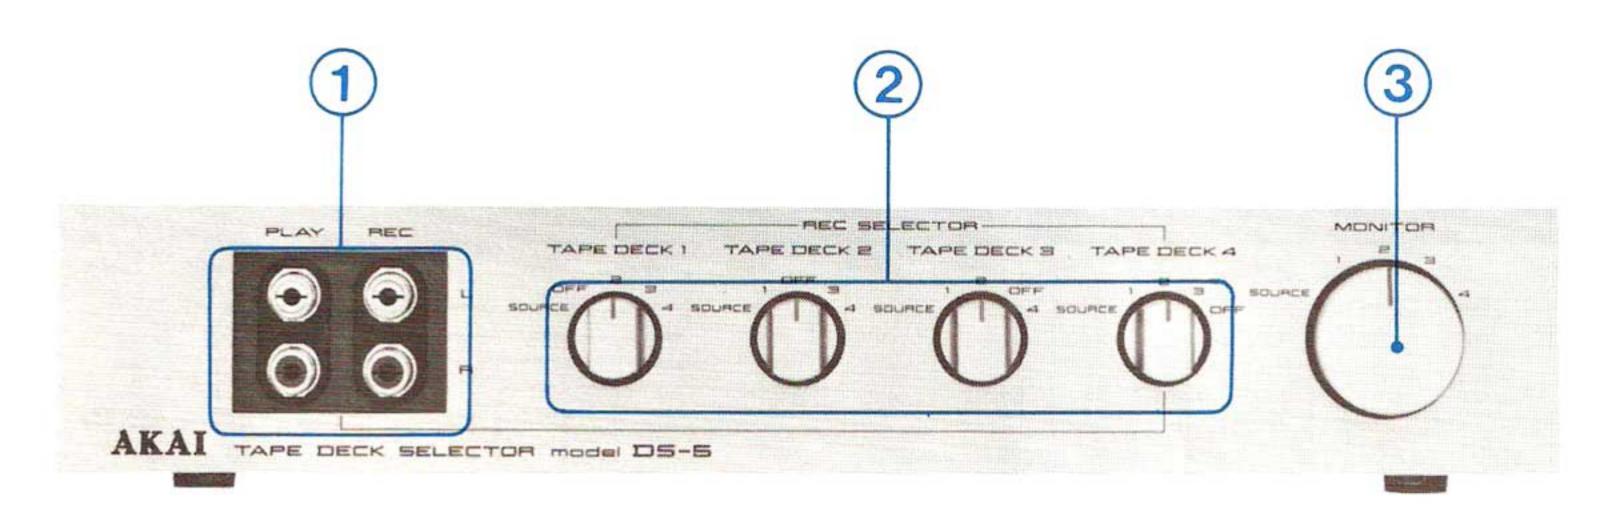

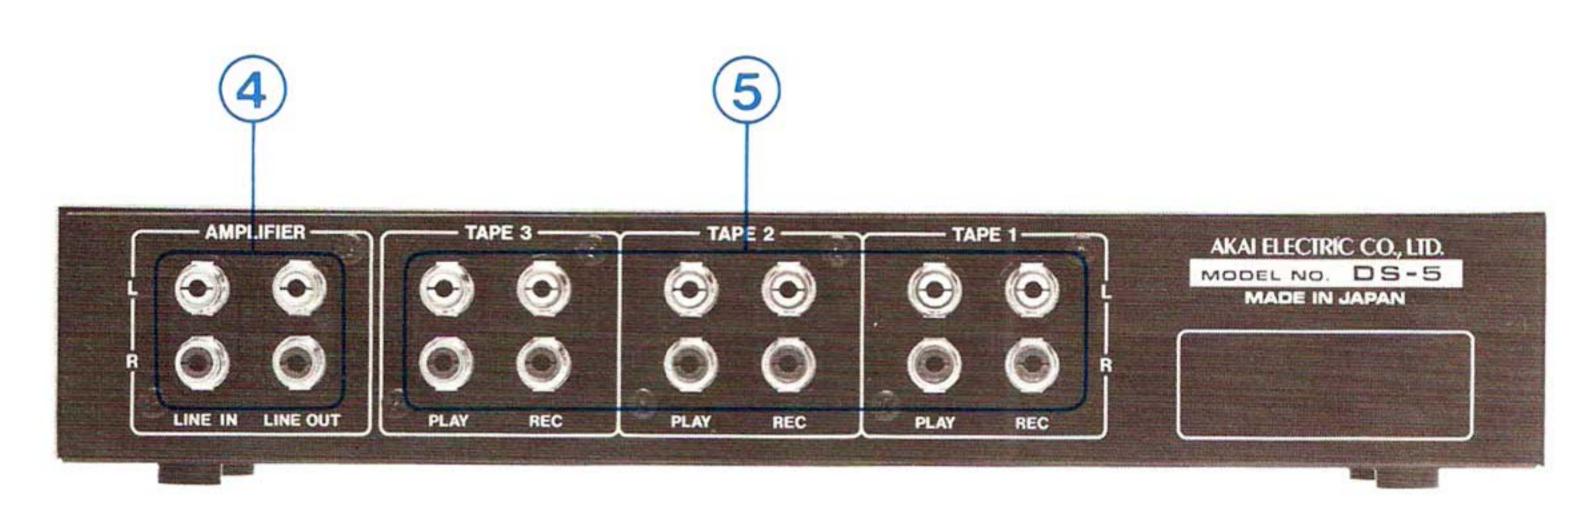

1. Tape 4 Jacks

PLAY: Connect to the output jacks (LINE

OUT) of a tape deck.

REC: Connect to the input jacks (LINE

IN) of a tape deck.

2. Recording (REC) SELECTOR, TAPE DECK 1 to

SOURCE: Set to this position when recording

from a source (tuner, turntable, etc.)

connected to the amplifier.

1 to 4: When dubbing, set to the number

corresponding to the tape deck in

playback mode.

OFF: Set to this position when the tape

deck is in playback mode for dubbing. Also set to this position when

not in use.

3. MONITOR Selector

SOURCE: Set to this position to monitor signals from the source (tuner, turntable, etc.) connected to the amplifier.

> * Set the Input Selector or the Tape Monitor Switch of the amplifier to Tape.

1 to 4: Set to the number corresponding to

the tape deck to monitor the signals

from the tape deck.

4. AMPLIFIER Jacks

LINE IN: Connect to the amplifier's REC

jacks.

LINE OUT: Connect to the amplifier's PLAY

jacks.

5. TAPE 1 to 3 Jacks

PLAY: Connect to the output jacks (LINE


OUT) of a tape deck.

REC: Connect to the input jacks (LINE

IN) of a tape deck.

When connecting a mixing amplifier, graphic equalizer or noise reduction system instead of a tape deck, connect its input jack to one of the LINE OUT jacks and its output jack to the LINE IN jacks.

CONNECTIONS

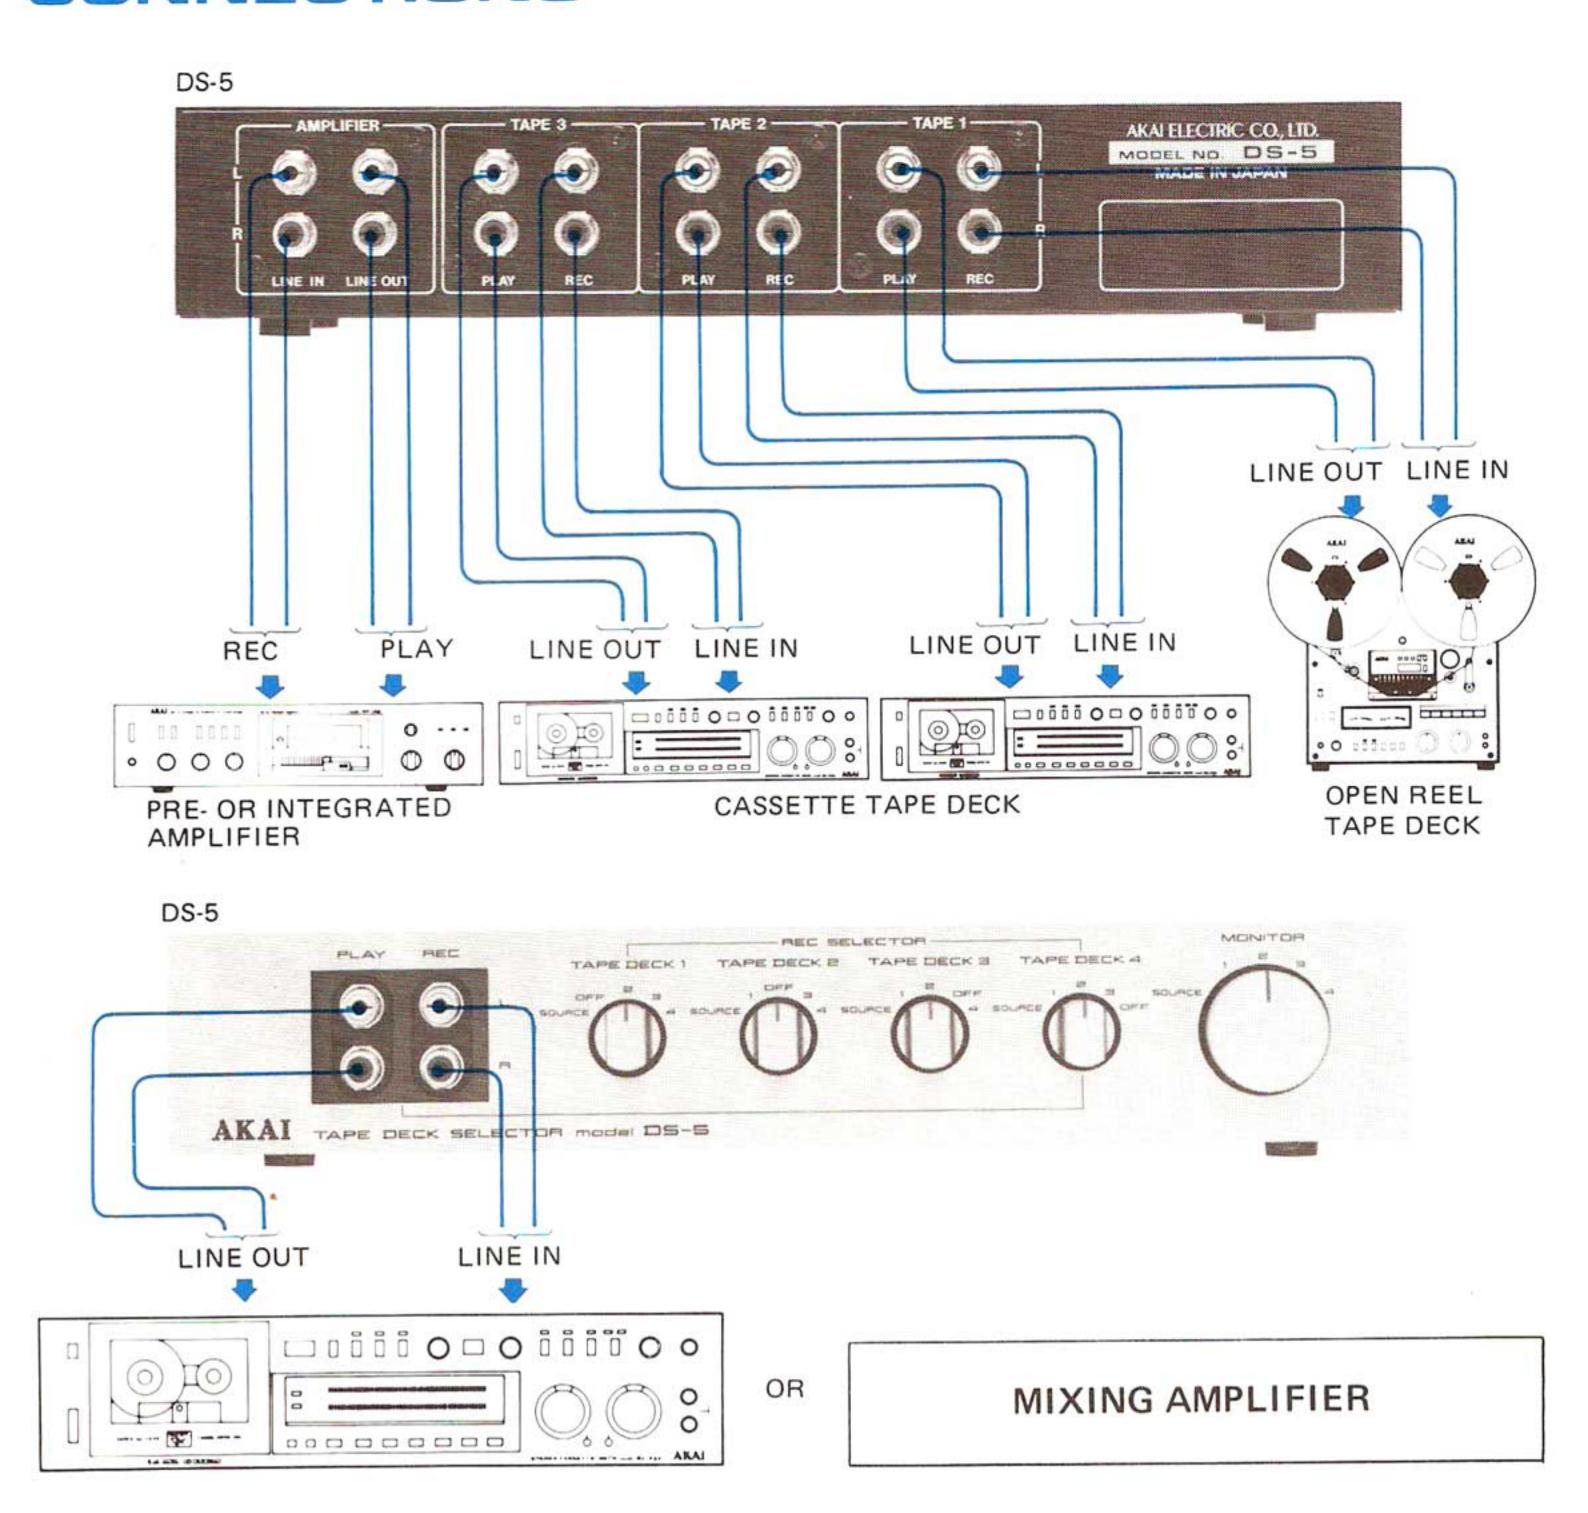


CONNECTIONS

- Turn off all the components before connecting.
- Carefully connect the components. The chance of incorrectly connecting the components is high due to the large number of connection cords.
- Do not mix-up the left and right, LINE IN and LINE OUT connections.
- Noise and distortion will result if the plugs are not clean or not properly inserted into the jacks.

CAUTION:

When connecting such accessory as a mixing amplifier, be very careful concerning the relationship between the inputs and the outputs. If a tape deck's input jacks are somehow connected to its output jacks through another component such as a mixing amplifier during recording or monitoring, oscillation may occur. This will have an adverse effect on the tape deck as well as on the other components connected to the DS-5.


OPERATIONS

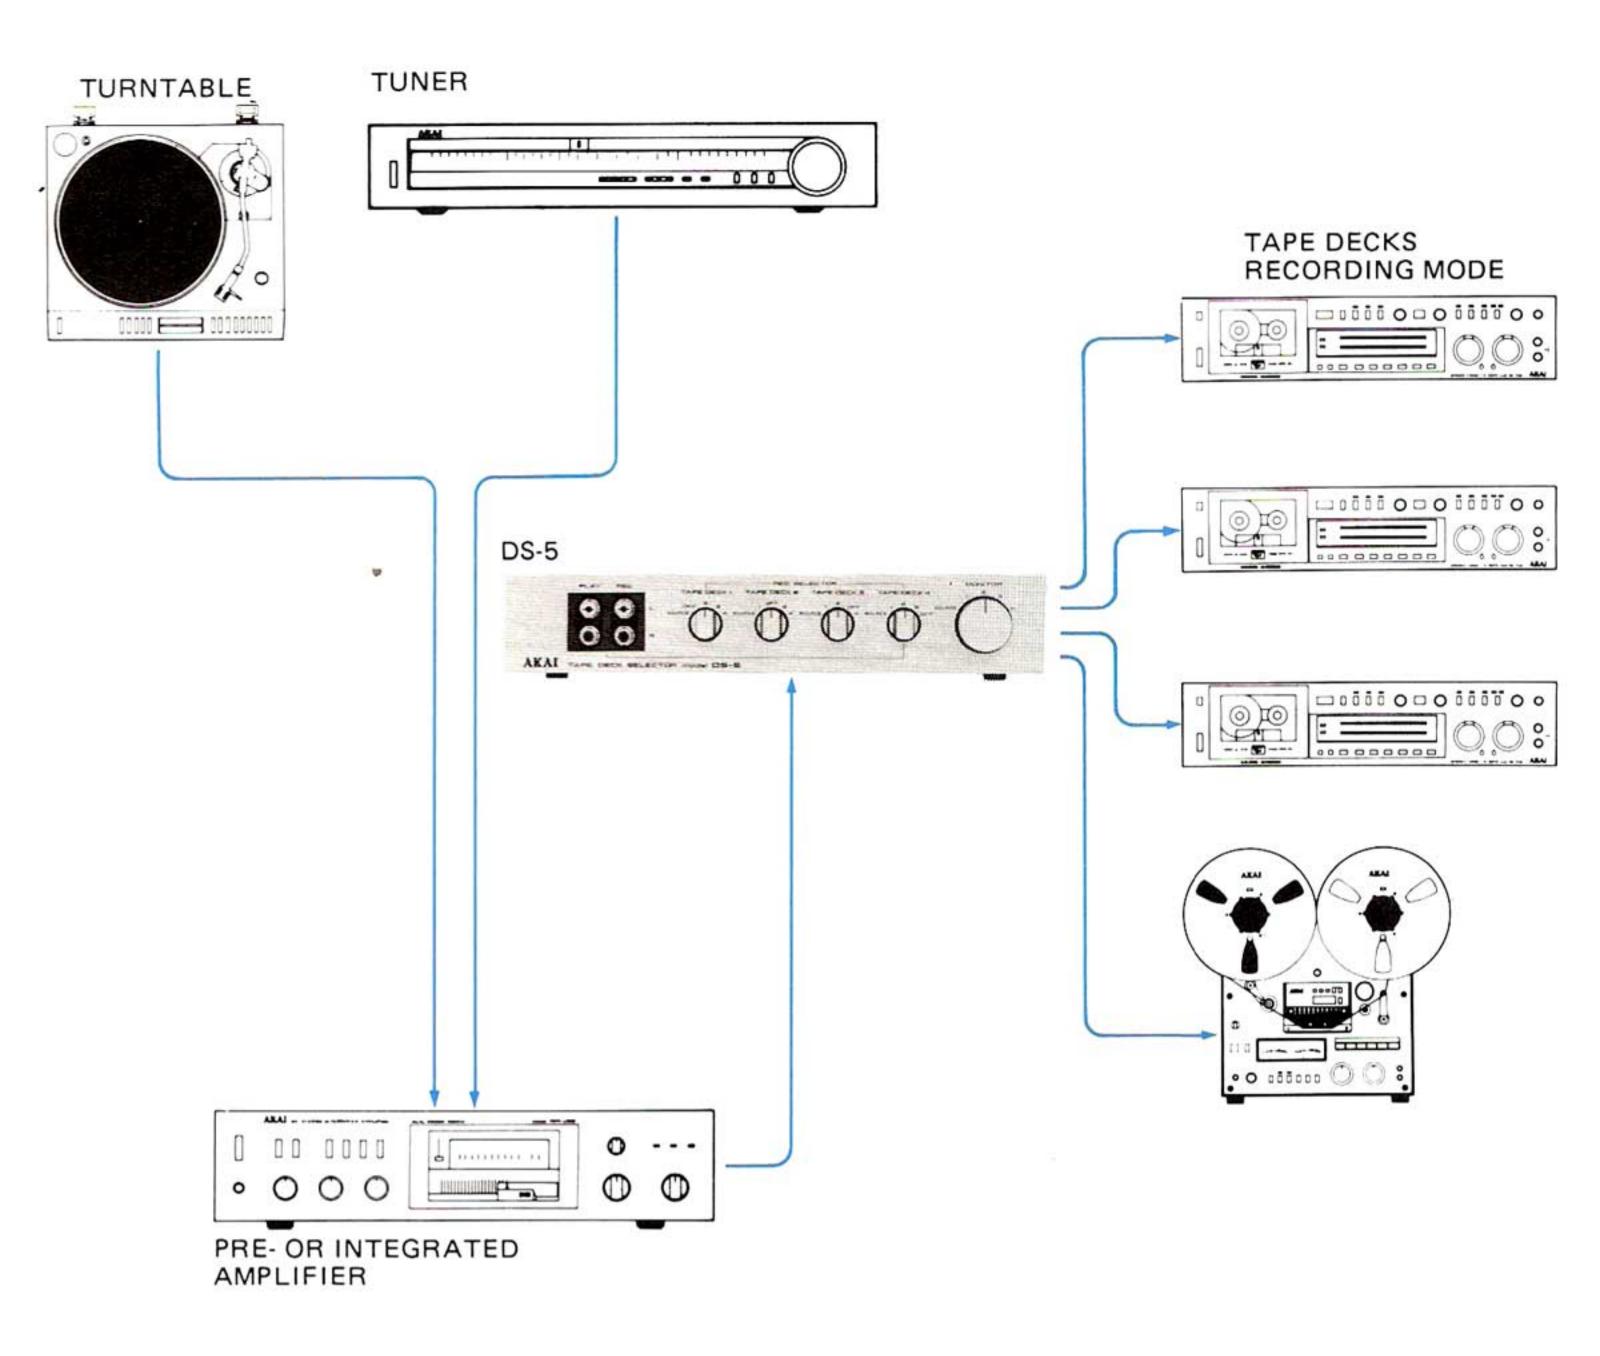

Recording from a tuner or turntable connected to the amplifier: -

- Set the Input Selector of the amplifier to Phono or Tuner. For amplifiers with a Recording Selector, set the Recording Selector to the same position as the Input Selector.
- Set the DS-5's REC SELECTOR TAPE DECK 1 to 4 to SOURCE.
- 3. Set the amplifier for tape monitoring.
 - * Refer to its Operator's Manual.

- 4. Set the tape decks to recording mode.
 - * Refer to each component's Operator's Manual.
- Set the MONITOR selector to monitor the signals.
 - * Refer to MONITORING.

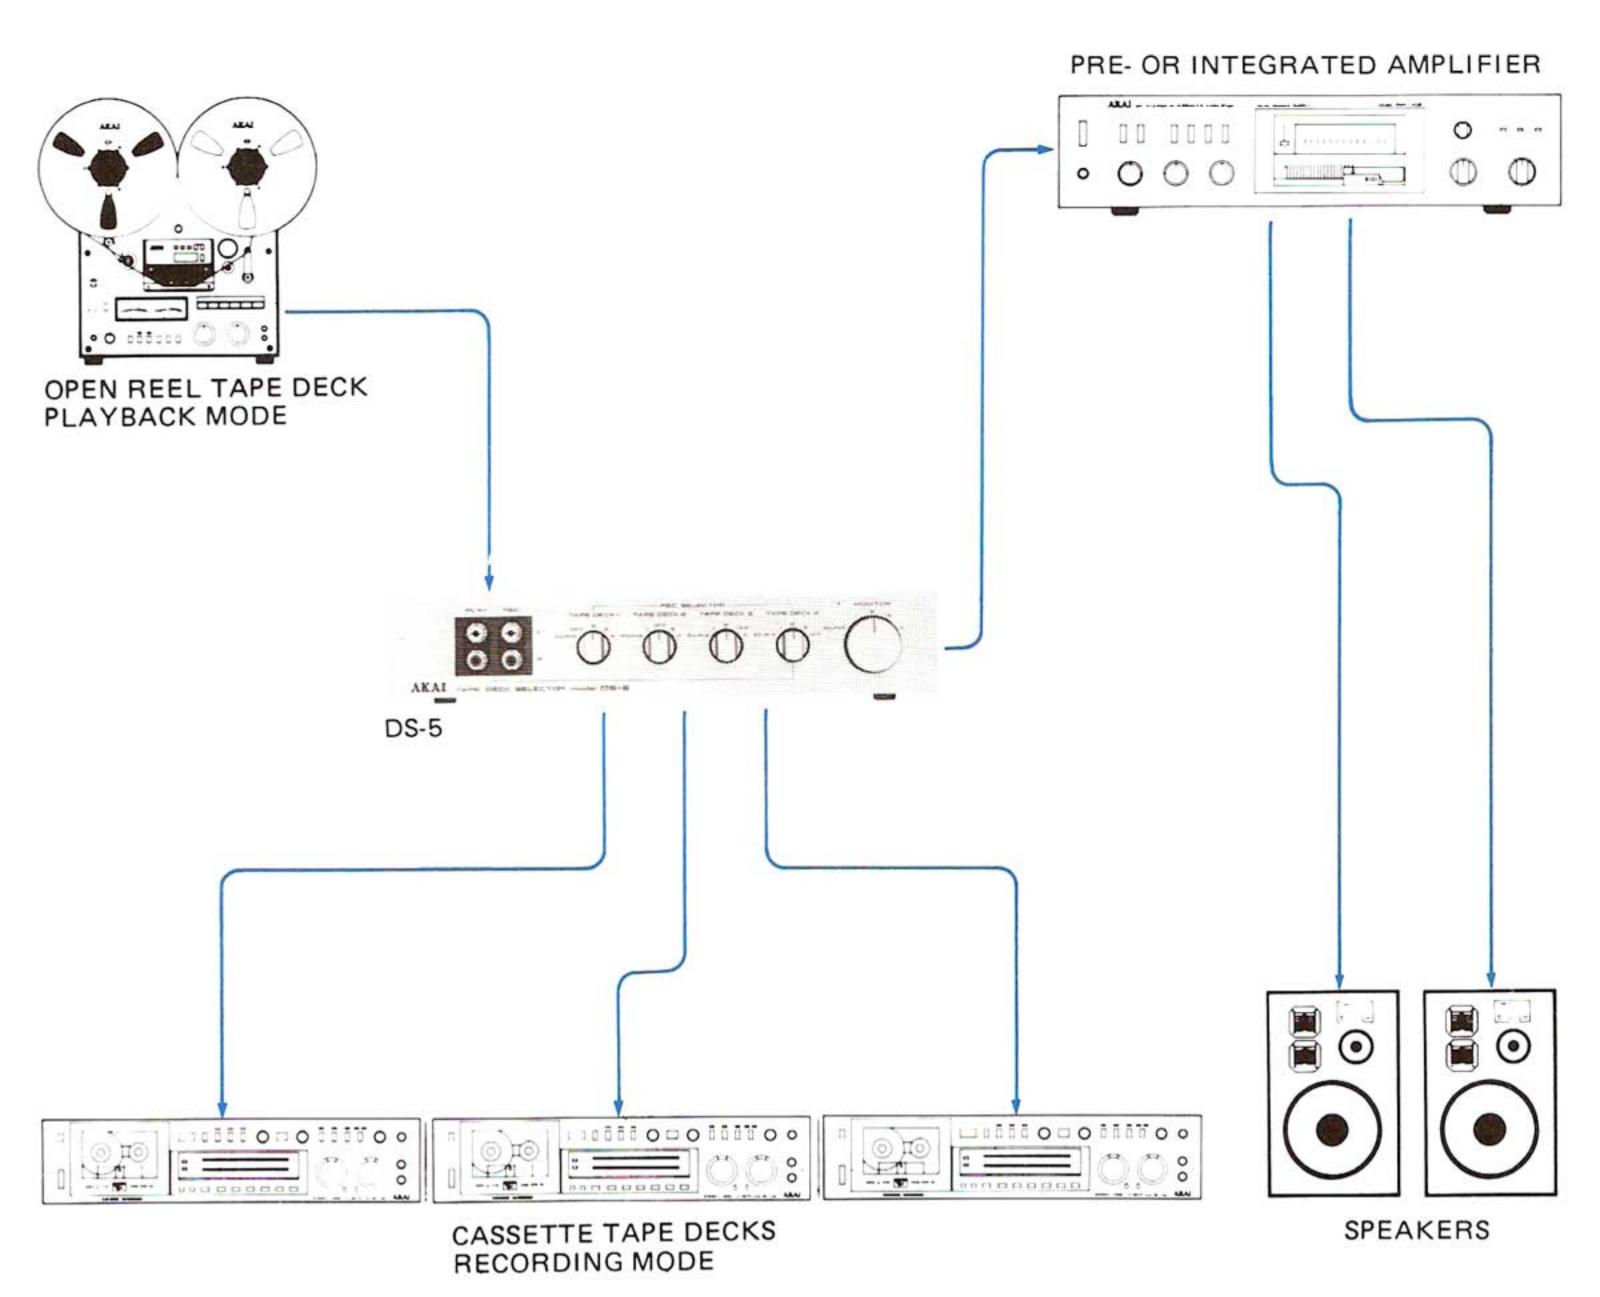

Dubbing: -


Tape dubbing can be done from one tape deck to the other three tape decks or from TAPE DECK 1 to TAPE DECK 2 and TAPE DECK 3 to TAPE DECK 4.

- Dubbing from TAPE DECK 1 to TAPE DECK 2 to 4:
 - a) Set the REC SELECTOR TAPE DECK 1 to OFF.
 - b) Set the REC SELECTOR TAPE DECK 2 to 4 to "1".

Dubbing from TAPE DECK 1 to TAPE DECK 2 and TAPE DECK 3 to TAPE DECK 4:

a) Set the REC SELECTOR TAPE DECK 1 to OFF and the REC SELECTOR TAPE DECK 2 to "1".

- b) Set the REC SELECTOR TAPE DECK 3 to OFF and the REC SELECTOR TAPE DECK 4 to "3".
- Set the source tape deck(s) to playback mode and the recording tape decks to recording mode.
 - * Refer to each component's Operator's Manual.
- 3. Set the amplifier for tape monitoring.
 - * Refer to amplifier's Operator's Manual.
- Set the MONITOR selector to monitor the signals.
 - * Refer to MONITORING.

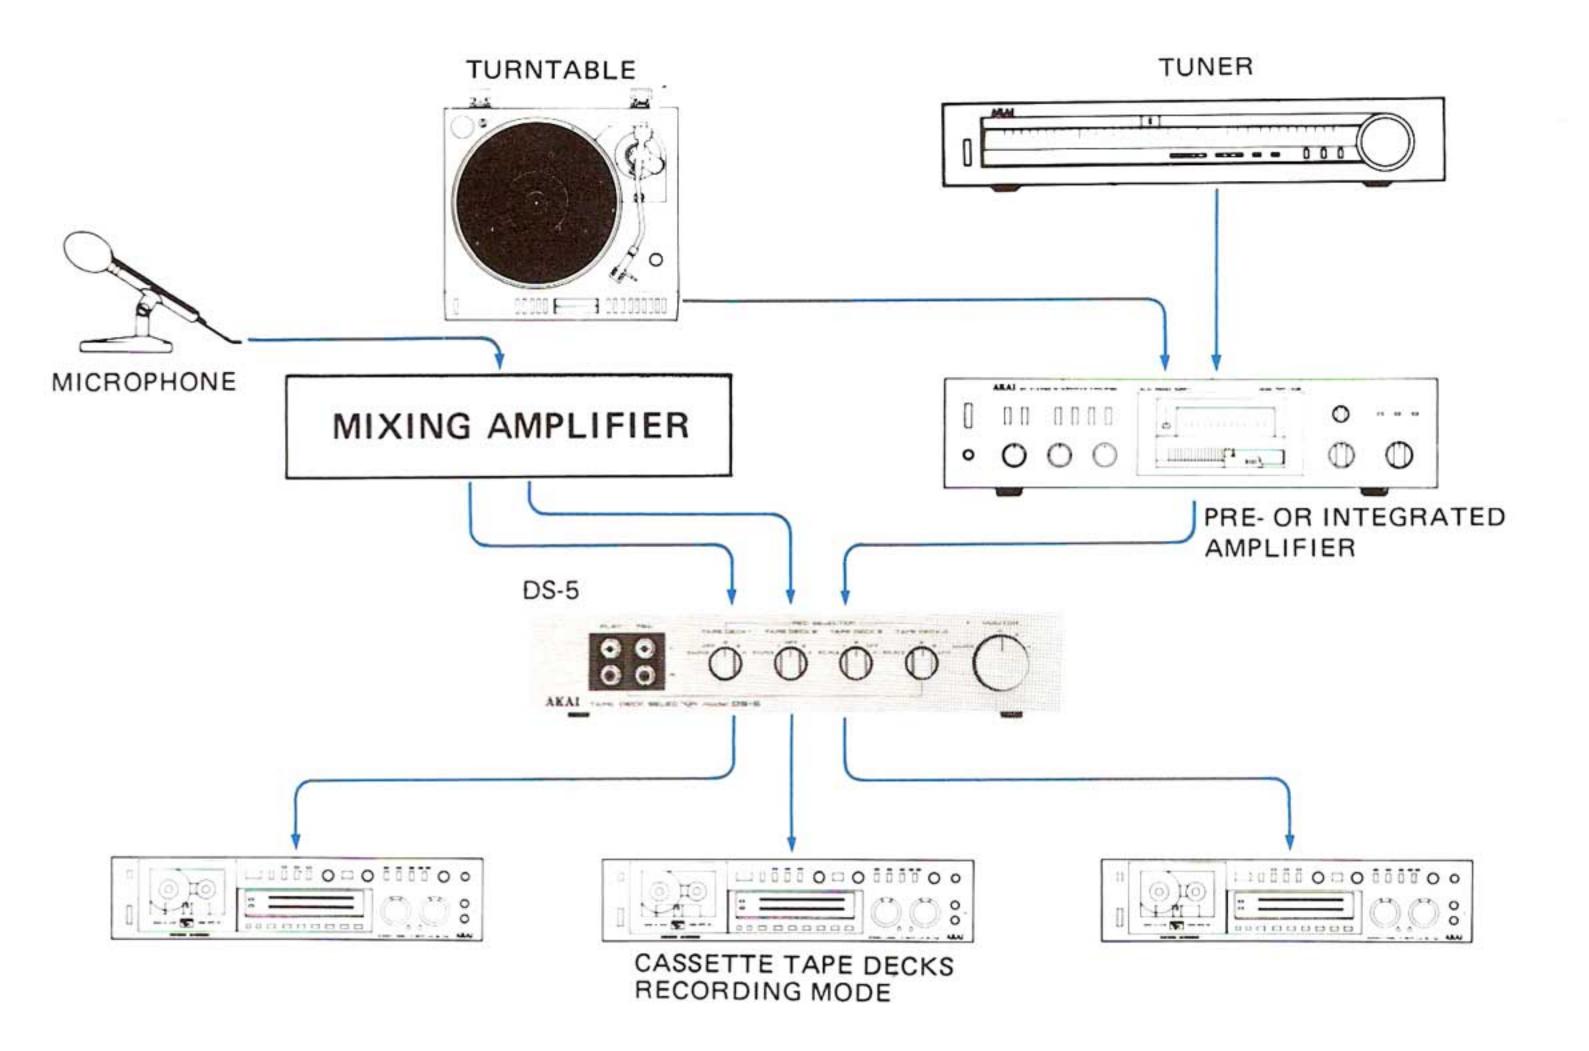

Mixing:

Recording microphone signals mixed with turntable or tuner signals by a mixing amplifier connected to the TAPE 4 jacks:

- Set the Input Selector of the amplifier to Phono or Tuner. For amplifiers with Recording Selector, set the Recording Selector to the same position as the Input Selector.
- 2. Set the REC SELECTOR TAPE DECK 1 to 3

to "4".

- Set the REC SELECTOR TAPE DECK 4 to SOURCE.
- 4. Set the amplifier for tape monitoring.
- 5. Set the tape decks to recording mode.
- Set the MONITOR selector to monitor the signals.

MONITORING-

When using 3 head tape decks for recording (independent recording, playback and erase heads), the recording being made can be compared with the source.

Example: S

Source:

turntable connected to the

amplifier.

Recording: TAPE DECK 1 to 4.

- Set the MONITOR selector to SOURCE to monitor the source signal.
- 2. Set the MONITOR selector to 1, 2, 3 or 4 to

monitor the just recorded signal.

Example: Source:

TAPE DECK 1 and 3

Recording: TAPE DECK 2 and 4

- Set the MONITOR selector to 1 or 3 to monitor the source signal.
- 2. Set the MONITOR selector to 2 or 4 to monitor the just recorded signal.

When using 2 head tape decks for recording (recording/playback and erase heads), only the source signal can be monitored.

SPECIFICATIONS:

DIMENSIONS.... 280(W) x 54(H) x 120(D) mm

 $(10.9 \times 2.1 \times 4.7 \text{ inches})$

WEIGHT 1.0 kg (2.2 lbs)

for improvement purposes, specifications and design are subject to change without notice.



AKAI ELECTRIC CO., LTD. AKAI TRADING CO., LTD.

12-14, 2-chome, Higashi-Kojiya. Ohta-ku, Tokyo, Japan

AKAI AMERICA, LTD.

P.O. Box 6010, 800 W. Artesia Blvd. Compton, Calif., 90224, U.S.A. TELEPHONE: (213) 537-3880 TELEX: 67-7494



Printed in Japan U 560314D1 560323-01