

TANDBERG

10 X

Service Manual



Tandberg
RADIO

CONTENTS

	page
Introduction	2
Maintenance	3
Changing the power supply transformer tapings	3
Changing from NAB correction to IEC correction.	4
Electrical adjustments.	5
Circuit diagrams and printed boards	6

INTRODUCTION


All paragraphs in this manual are valid for model 10X. For mechanical servicing, use the Service Manual for model 10XD.

GENERAL

Only HL (High output/Low noise) tape should be used for recording. Make sure that the heads and tape path are clean.

To check the heads, simply remove the two head covers. They should be pulled straight off.

When electrical adjustment are to be made the wooden cabinet must be removed. Lay the 10X carefully down on the front. Remove the four montig screws as shown in Figure 1.1. The cabinet should be pulled straight off.

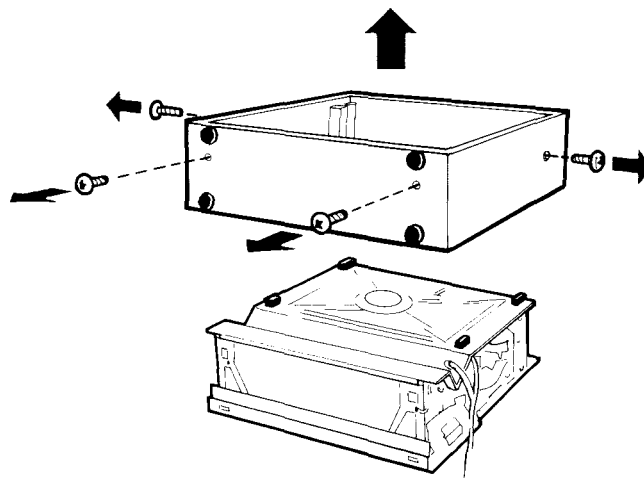

MAINTENANCE

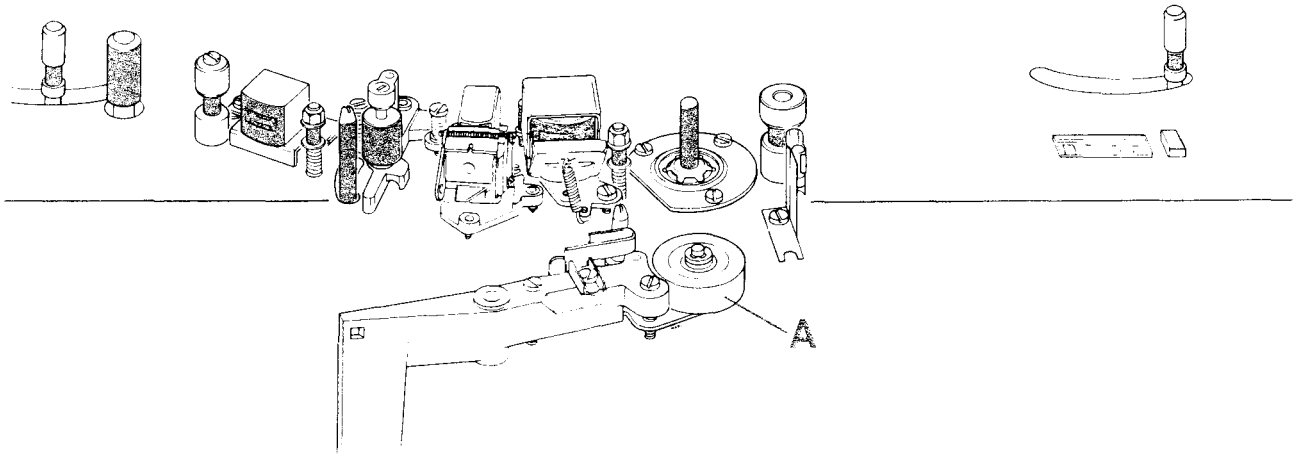


Fig. 2.1 Cleaning the tape path

CLEANING THE TAPE PATH

It is important that the tape path is clean before adjustments are made. The tape tension arms must also be cleaned. If the heads or guide posts have been adjusted, the tape path must be de-magnetized.

Cleaning should be carried out with cotton-bud sticks (Q tips) moistened with *pure alcohol or methylated spirits*. A special cleaning kit called "Tandberg Professional Tape Head Cleaner" is also available.

Aerosol sprays indented for video tape recorders may be used, but it is not sufficient just to spray the parts; cotton-bud sticks must also be used.

Obstinate deposits on guide posts should be first well softened and then removed with the aid of a toothpick.

The pinch roller A should be cleaned if the tape runs unevenly or if there are visible deposits on the roller (4 to 6 times a year should be sufficient, even if the tape recorder is much used). Make sure that the pinch roller is dry after cleaning.


LUBRICATION

The pinch roller and the flywheel have self-lubricating bearings and must not be lubricated. The reel motors and the capstan motor needs no lubrication.

CHANGING THE POWER SUPPLY TRANSFORMER TAPPINGS

Since the machine employs a photo-electric sensor for speed regulation, the speed is not dependent on the power frequency.

To change the wiring of the power supply transformer to suit another power supply voltage, see Figures. The power lead must be connected to the primary of the transformer as shown in the relevant Figure.

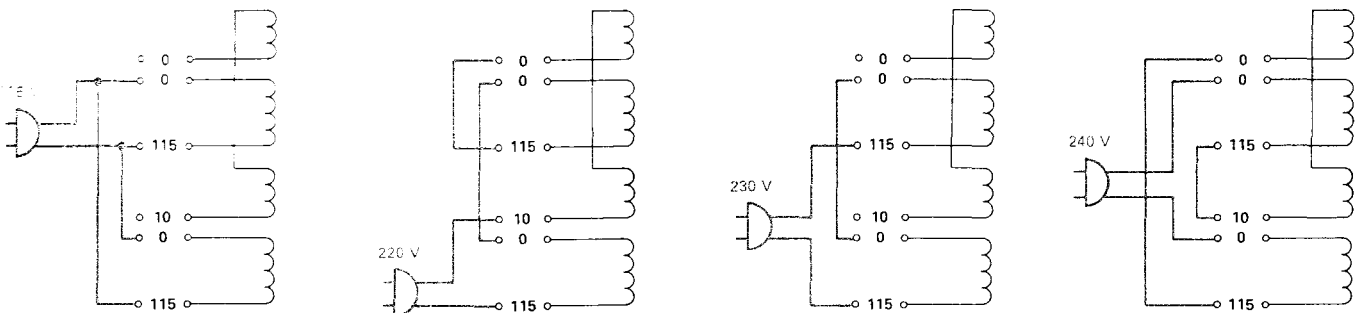


CHANGING FROM NAB CORRECTION TO IEC CORRECTION

COMPONENT:	VALUE:	CHANGED TO:
R7/107	22 K	removes
R8/108	1,5 K	removes
R10/110	1 K	3,3 K
R11/111	220	replace with strap
R21/121	2,7 K	replace with strap
C4/104	0,047 uF	removes
C6/106	3300 pF	4700 pF
D1/101	IN4148	removes
D2	IN4198	removes


Record amplifier A7

COMPONENT:	VALUE:	CHANGED TO:
R9/109	220	180
R11/111	1,5 K	3,3 K
R12/112	150	100
R21/121		330 new
R22/122		10 k new
C6/106	0,022 uF	4700 pF
C7/107	0,068 uF	0,1 uF
C12/112		0,047 uF new
D5/105		IN4148 new
D6/106		IN4148 new


Playback amplifier A11

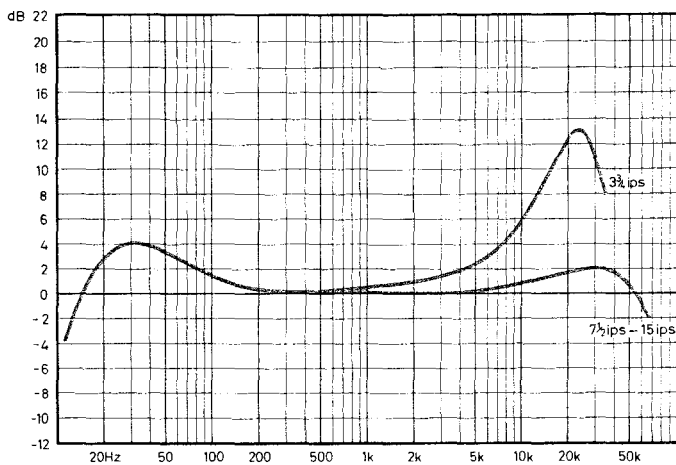


IEC record curve

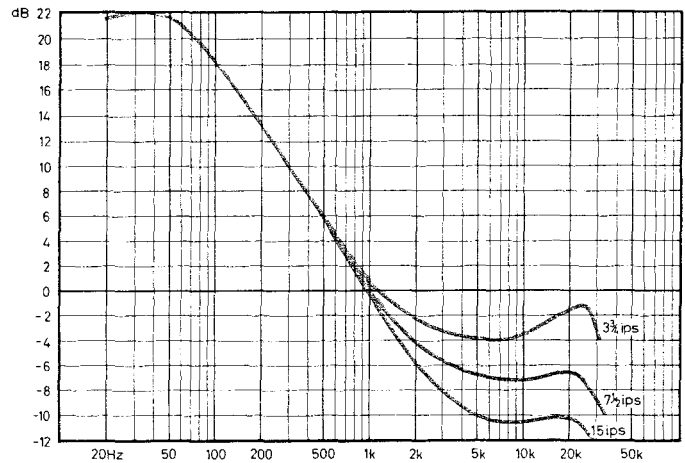

IEC playback curve

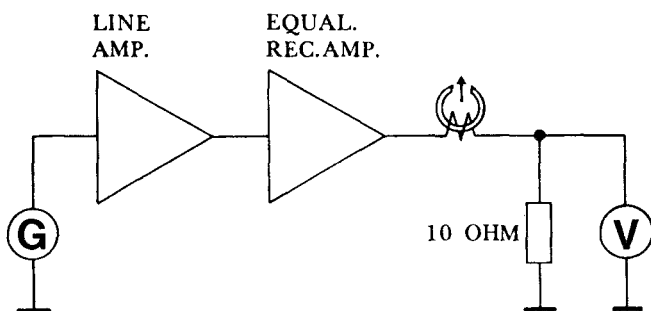

Checking the record curve

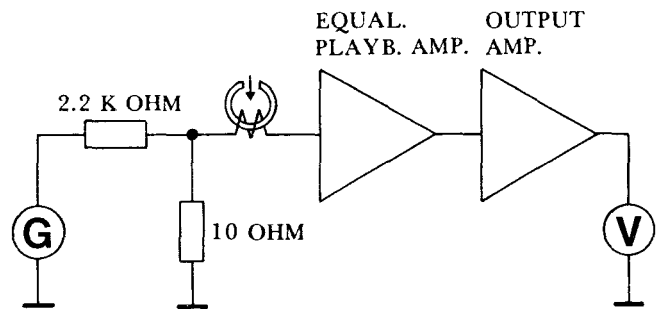

Checking the playback curve

ELECTRICAL ADJUSTMENTS

Make the adjustments in the order in which they are listed here. Many of the adjustments require that previous adjustments have already been correctly made.

Clean and degauss the tape path before and after adjustments. It is assumed that the tape path has already been correctly adjusted.

NECESSARY EQUIPMENT

- 2 high impedance voltmeters (do NOT use universal meters).
- Frequency counter.
- Audio generator.
- Distortion meter.
- Wow meter (required for wow test only).
- Test Tapes:
 - No. 1 - Height adjustment, 4 track playb. head.
 - No. 2 - Azimuth adj. playb. head 15,000 Hz, 7 1/2 ips.
 - No. 3 - Playb. curve, DIN 19H, 7 1/2 ips.
 - No. 4 - Playb. level adj., 400 Hz, 7 1/2 ips.
 - No. 9 - Full track, 1000 Hz. Erase head adj.
 - No. 11 - Speed check, 1000 Hz, 7 1/2 ips.

Only HL (High Output/Low Noise) tape should be used for recording. Make sure that the heads and tape guides are clean. To check the heads, simply remove the two head covers. They should be pulled straight off.


PULL-IN TIME FOR ARMATURES AND STARTING VOLTAGE FOR THE REEL MOTORS

When the machine is in the STOP mode and the PLAY button is pressed the reel motors receive extra voltage at the moment of starting to prevent tape loops forming. (Remember to depress the 10½" REEL button when 10½" reels are in use). The duration of this extra voltage can be adjusted by means of pot. R36 on the logic board. R36 should be adjusted so that the pull-in time is about 250 ms. This delay can be checked on U26-9 with the aid of an oscilloscope.


Test No.	Adjustment or check	Test tape No.	Set the deck to	Measuring instrument	Measure at:	Adjust	Correct reading	Speed	Comments
1.1	Playback-head, azimuth	2	Playback	a.c. voltmeters	LINE OUT	Azimuth screw	Maximum output	7 1/2"	Maximum output or best compromise.
1.2.	Playback curve, DIN 19H	3	Playback	a.c. voltmeters	LINE OUT	Playback EQ. adj. R46-R146	+ 3 dB. at 18 KHz	7 1/2"	Playback curve, Din 19H. The tape contains the following frequencies: 1000 Hz (reference) 18 kHz, 15 kHz, 10 kHz, 4 kHz 125 Hz, 40 Hz, 1000 Hz (ref.) Adjust R46 - R146 to + 3 dB at 18 KHz.
1.3.	Playback level	4	Playback	a.c. voltmeters	LINE OUT	PLAYBACK LEVEL R31-R131	1.0 V	7 1/2"	
1.4.	Playback meter adjustments	—	See comments	a.c. voltmeters	LINE OUT	PLAYBACK METER R30-R130	1.5V	7 1/2"	To be performed without tape. Put a piece of paper between the light source and the phototransistor. Set the deck in SOURCE. Depress the PLAY button. Connect a audio-generator, 1000 Hz to LINE IN. Adjust with the LINE INPUT LEVEL to 1.5V on the voltmeters. Adjust R30 (L) and R130 (R) to 0 dB indication on the meters.
1.5.	Speed	11	Playback	Frequency counter	LINE OUT	R40-15" R41-7 1/2" R42-3 3/4"	± 0.3% 997-1003 Hz in 7 1/2"	All	Test-tape No. 11 are recorded at 1000 Hz in 7 1/2". Start in 15". Adjust R40 to correct speed. Then adjust R41 in 7 1/2" and R42 in 3 3/4". R40/R41/R42 are on the motor control board.
1.6.	Bias pre-adjustment	—	Record	a.c. voltmeter	See comments	Bias adj. R44-R144	Approx. 22V	7 1/2"	To be performed without tape. Measure across the bias head or on pin 2 (L) and pin 3 (R) on contact P11 on the main board.

Test No.	Adjustment or check	Measuring instrument	Measure at:	SOURCE/ TAPE buttons	Set the deck to	Procedure
2.1	Bias head horizontal adjustment	a.c. voltmeters	LINE OUT	TAPE	RECORD 7 1/2"	Connect an audio-generator to LINE IN. Set the generator to 1000 Hz and adjust with the LINE INPUT LEVEL to approx. 2V on the voltmeters. Turn the 2 mm Allen screw clockwise and the head moves to the left. Then turn the screw counter clockwise to maximum reading on the voltmeters. Use the first maximum when the head moves from the left to the right side.
2.2	Azimuth, record head	a.c. voltmeters	LINE OUT	TAPE	RECORD 3 3/4"	Connect an audio-generator to LINE IN. Start stereo recording in 3 3/4 IPS of a 1000 Hz signal 30 dB below normal recording level (0 dB). Use the voltmeter readings as reference level. Then record a 16000 Hz signal and turn the azimuth screw on the record head to maximum reading on the voltmeters.
2.3	Record/playback curves	a.c. voltmeters	LINE OUT	TAPE	RECORD all speeds	Connect an audio-generator to LINE IN. Start recording in 3 3/4" of a 1000 Hz signal 30 dB below normal recording level (0 dB). Use the voltmeter readings as reference level. Then record a 18,000 Hz signal at the same level and check that the output is within ± 2 dB. If the output is too high, increase bias current with R44 (L) and R144 (R). If the output is too low, alter the signal frequency to 1000 Hz and adjust for maximum output with R44 (L) and R144 (R). Then establish a reference level, and re-check the output at 18,000 Hz. When the tolerance at 18,000 Hz has been met, check that the output level not deviate more than ± 2 dB from the following frequencies: 15" ± 2 dB 30-25,000 Hz 7 1/2" ± 2 dB 30-22,000 Hz 3 3/4" ± 2 dB 40-18,000 Hz When adjusting the record-playback curve in 15 ips. use tape with 15u magnetic coating. If tape with 10u magnetic coating are used, the higher frequencies will raise approx. 2 dB.
2.4	SOURCE/ TAPE	a.c. voltmeters	LINE OUT	SOURCE/ TAPE	RECORD 7 1/2"	Connect an audio-generator, 1000 Hz, to LINE IN. Adjust in SOURCE with the LINE INPUT LEVER to 0.5V on the voltmeters on the LINE OUT, (OUTPUT LEVEL controls to maximum). Set the deck to stereo recording and push the TAPE/SOURCE buttons down to TAPE. Then adjust RECORD LEVEL R19 - R119 so that the level reading is 1 dB higher on the voltmeters.
2.5	Record METER adjustment	a.c. voltmeter	-	SOURCE	RECORD 7 1/2"	Audio-generator 1000 Hz to LINE IN. Set the deck to SOURCE and in stereo recording. Adjust with the LINE INPUTS LEVEL to 1.5V on the voltmeters. Then adjust the record meters to 0 dB with R25 - R125.
2.6	Distortion	Distortion meter	LINE OUT	TAPE	RECORD 7 1/2"	Connect an audio-generator (or distortion meter generator) 1000 Hz to LINE IN. Record to 0 dB indication on the meters and read the distortion on the LINE OUT. Distortion, max. 3%.
2.7	Wow and flutter	Wow and flutter meter	LINE OUT	TAPE	RECORD All speeds	Connect the wow-and-flutter meter generator to the LINE IN. Read on the LINE OUT and in all speeds. If necessary, adjust R43 (on the motor control board) to minimum wow and flutter in 3 3/4". Wow and flutter max: 15" 7 1/2" 3 3/4" Peak, DIN 455" 0.07% 0.09% 0.15% Weighted R.M.S. 0.04% 0.06% 0.11%

Adjustment table 2

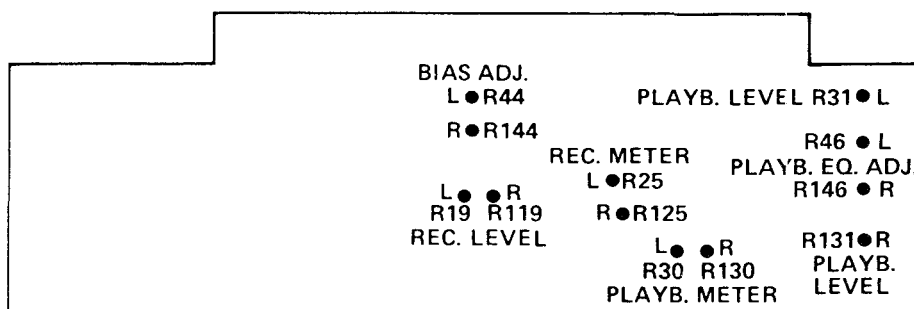


Location of adjustment points on the main board, solder side.

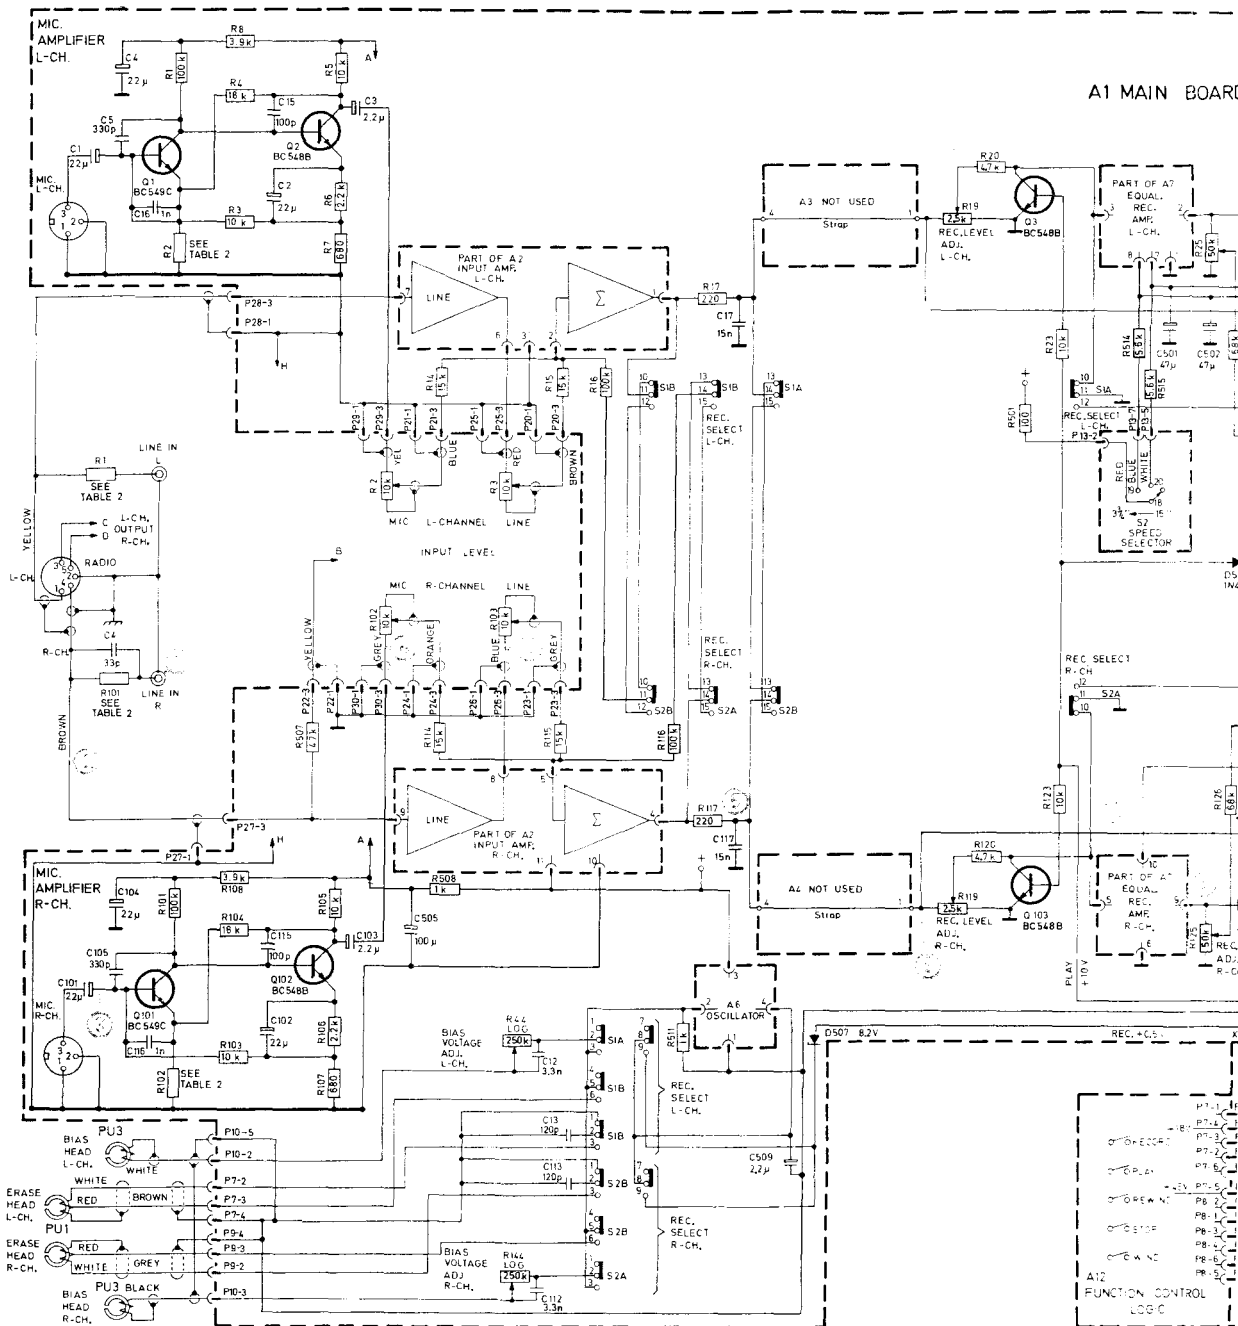



A1 MAIN BOARD

ALL THE SWITCHES ARE SEEN FROM SOLDER SIDE (NOTE 2 AND 3)

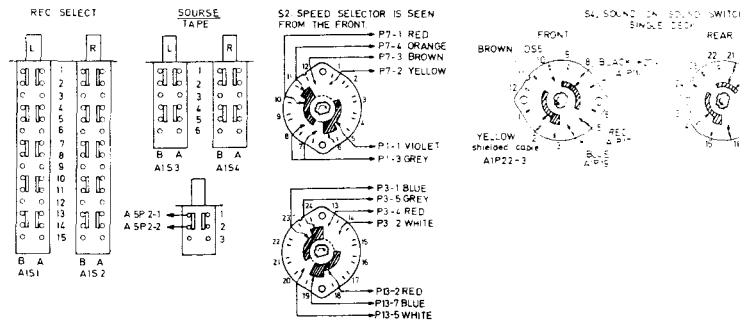

A1 MAIN BOARD CIRCUITS DIAGRAM

RD (NOTES 1-4)

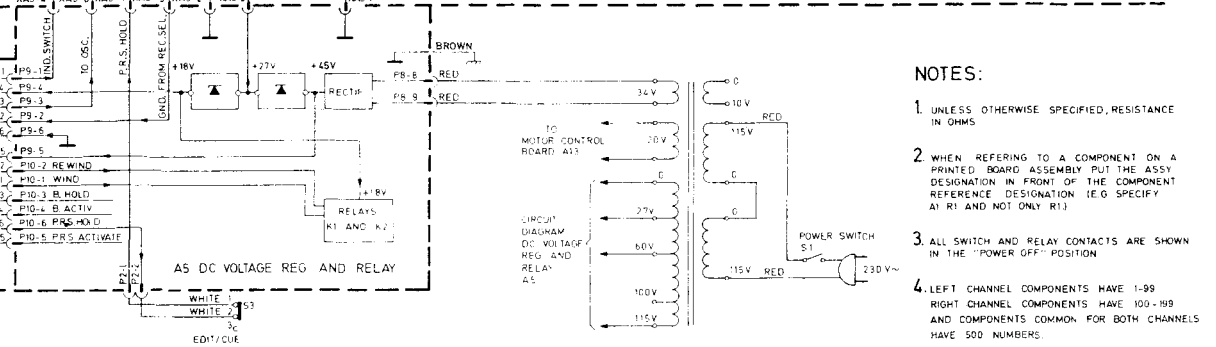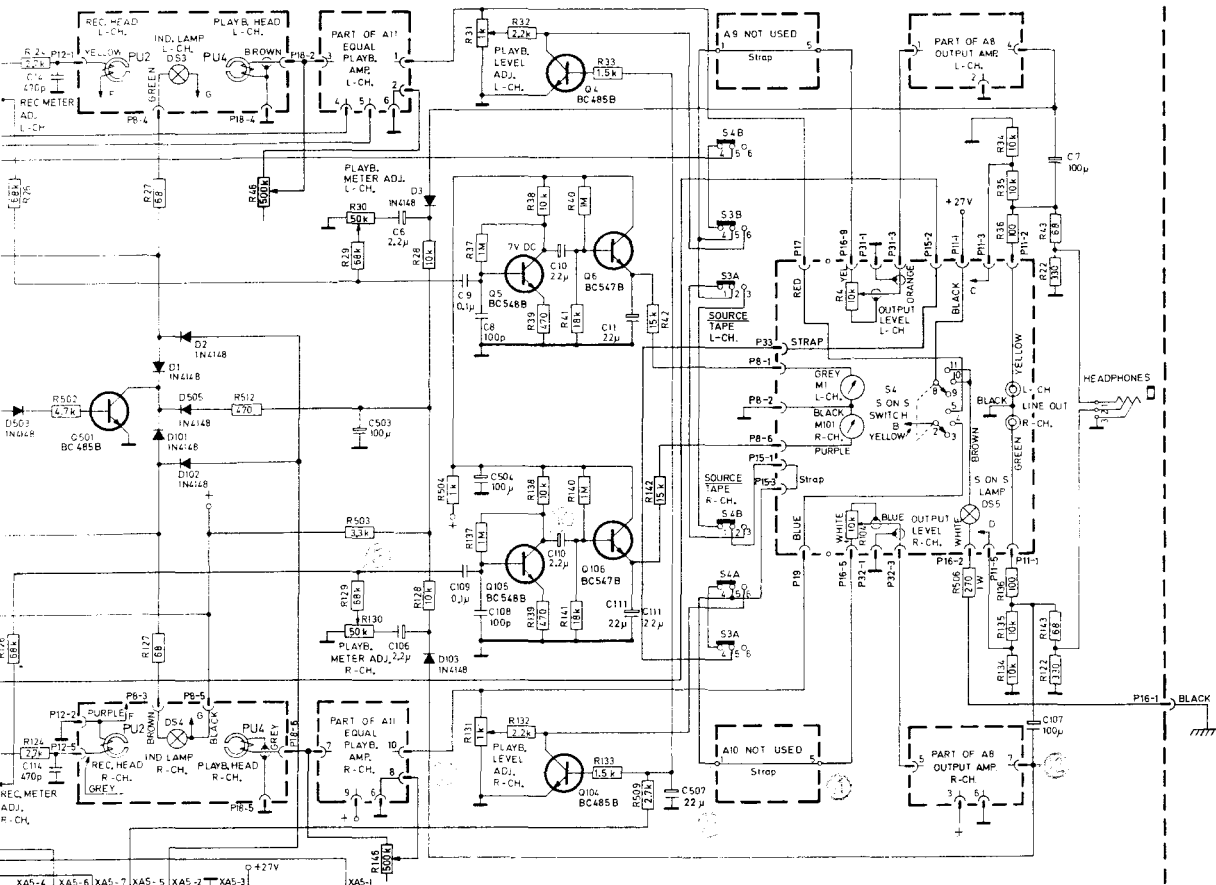

NOTES:


1. UNLESS OTHERWISE SPECIFIED, RESISTANCE IN OHMS
2. WHEN REFERRING TO A COMPONENT ON A PRINTED BOARD ASSEMBLY PUT THE ASSY DESIGNATION IN FRONT OF THE COMPONENT REFERENCE DESIGNATION (E.G. SPECIFY AT R1 AND NOT ONLY R1)
3. ALL SWITCH AND RELAY CONTACTS ARE SHOWN IN THE "POWER OFF" POSITION
4. LEFT CHANNEL COMPONENTS HAVE 1-99 RIGHT CHANNEL COMPONENTS HAVE 100-199 AND COMPONENTS COMMON FOR BOTH CHANNELS HAVE 500 NUMBERS.


TABLE 1: SENSITIVITY OF AMPLIFIERS

L	R	SENSITIVITY AT 1000Hz AND 7 1/2 I.R.S.
		30mV 100mV (U S)
		AT THE LINE IN SOCKET*
1	1	8mV 30mV (U S)
2	2	230 μV (U.S.: 0.5mV)
3	3	30 mV
4	4	80 mV
5	5	80 mV
6	6	4.5 mV
7	7	L3 V
8	8	150 mV
9	9	100 mV
10	10	100 mV
11	11	L5 V
12	12	150 mV
13	13	2 V



TABLE 2:

	230V/240V 50 Hz	115V 60Hz
R1/R101	150 k	58 k
R2/R102 (A1)	68	220

 

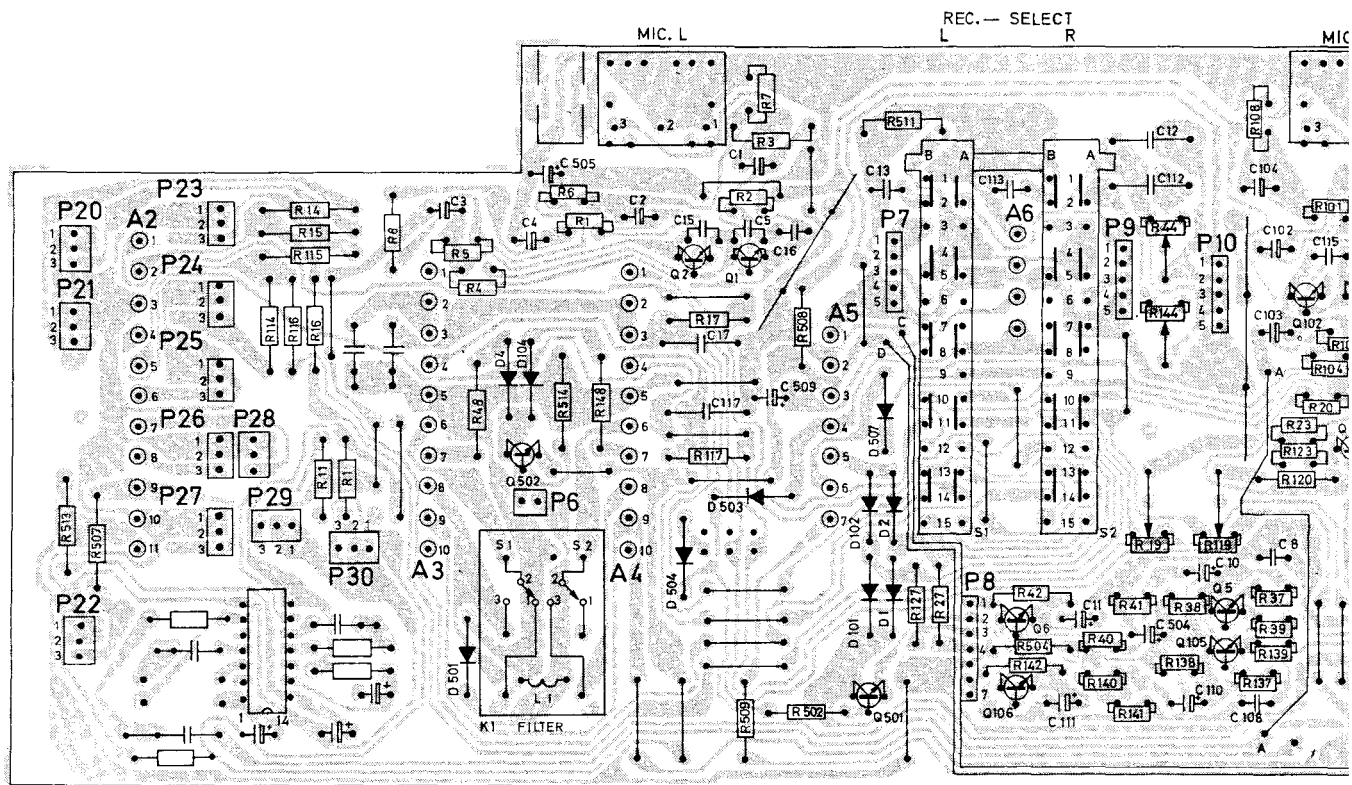

A1 MAIN BOARD

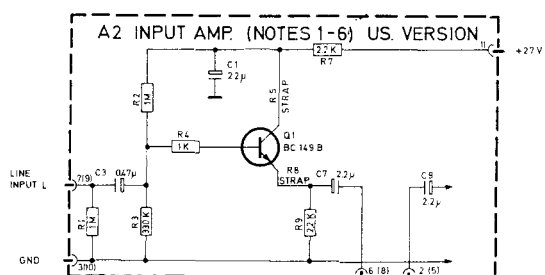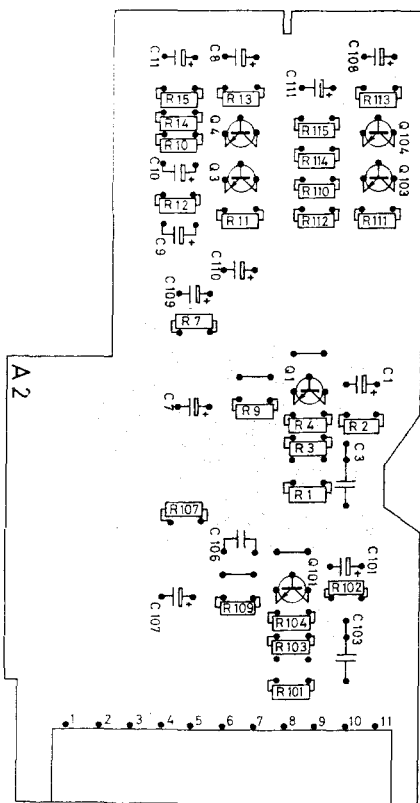


REFERENCE DESIGNATIONS NOTE 61

PREFIX WITH USA2	NOT USED
C1, 3, 7-11	C2, 4, 5, 6
C101, 102, 107, 111	C102, 104, 105, 106
Q1, 3, 4, 101, 103, 104	Q2, 102
R1-4, 7, 9-11	R5, 6, 8
R101-104, 107, 109-111	R105, 106, 108

COMPONENTS CHANGED ON US/A2



REF DESIGN	FROM	TO
R2, 102	100 K	1M
R3, 103	150 K	330 K
R5, 105	27 K	0 (STRAP)
R6, 106	39 K	0 (STRAP)

A2 INPUT AMP. BOARD, U.S. VERSION

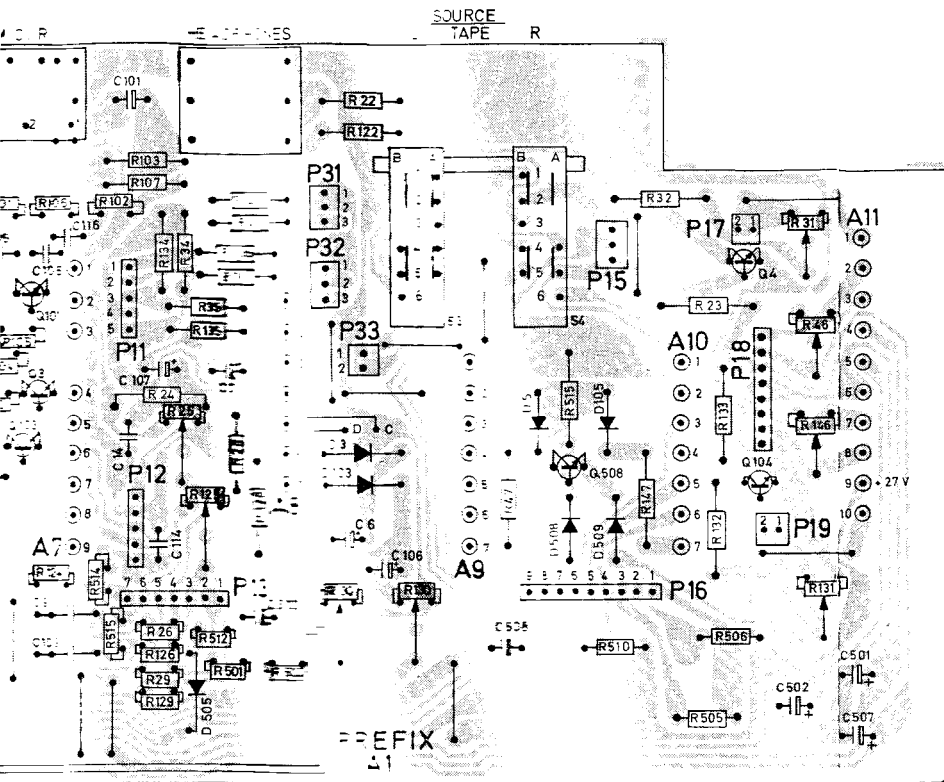

NOTES





1. UNLESS OTHERWISE SPECIFIED RESISTANCE IN OHMS
2. WHEN REFERRING TO A COMPONENT ON A PRINTED BOARD ASSEMBLY PUT THE ASSY DESIGNATION IN FRONT OF THE COMPONENT REFERENCE DESIGNATION I.E.G. SPECIFY A2R1 AND NOT ONLY R11
3. ONLY THE L-CHANNEL OF THE ASSEMBLY DESIGNATED A2 IS SHOWN
4. PLUG TERMINAL NO'S FOR THE R-CHANNEL ARE GIVEN IN BRACKETS BESIDE THE L-CHANNEL PLUG TERMINAL NO'S
5. L-CHANNEL HAS 1-99 AND R-CHANNEL HAS 100-199 AS COMPONENT NO'S WHEN REFERRING TO R-CHANNEL COMPONENTS ADD 100 TO THE L-CHANNEL NO'S (E.G. R10 OF THE L-CHANNEL HAS THE SAME VALUE AS R100 OF THE R-CHANNEL)
6. ALWAYS SPECIFY WHICH VERSION OF THE INPUT AMPLIFIER, THE US OR THE EU MODEL, YOU ARE REFERRING TO, ESPECIALLY WHEN ORDERING COMPONENTS

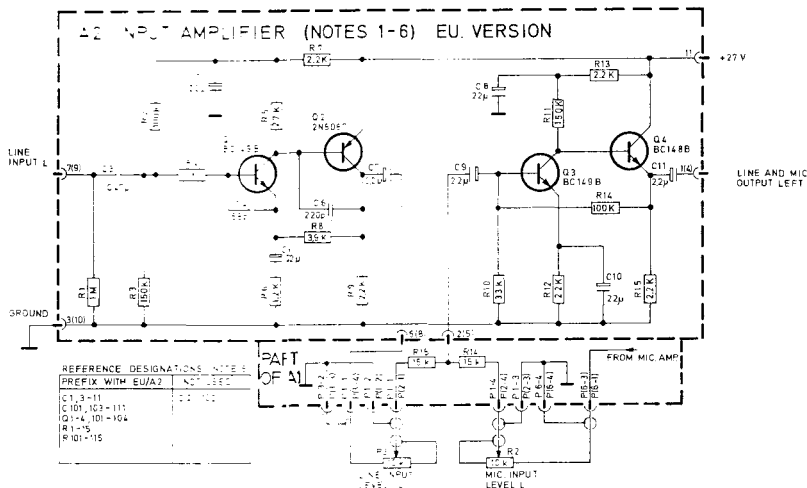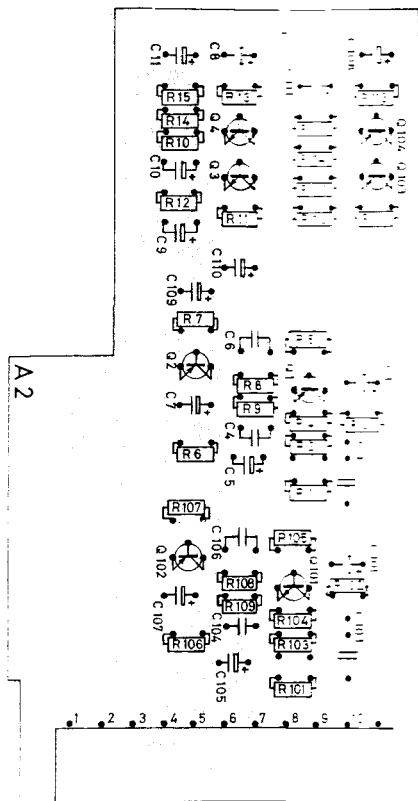

ALL THE BOARDS ARE SEEN FROM SOLDER SIDE



A2 INPUT AMP. BOARD, EUROPEAN VERSION

A12 FUNCTION CONTROL LOGIC

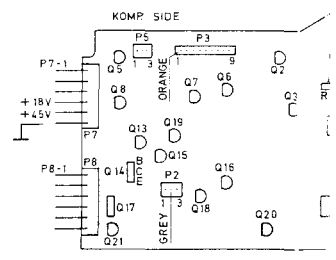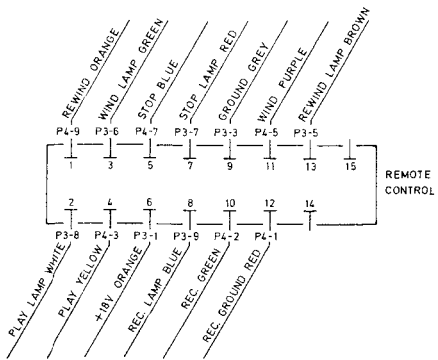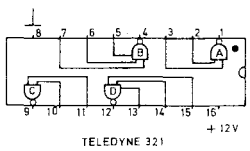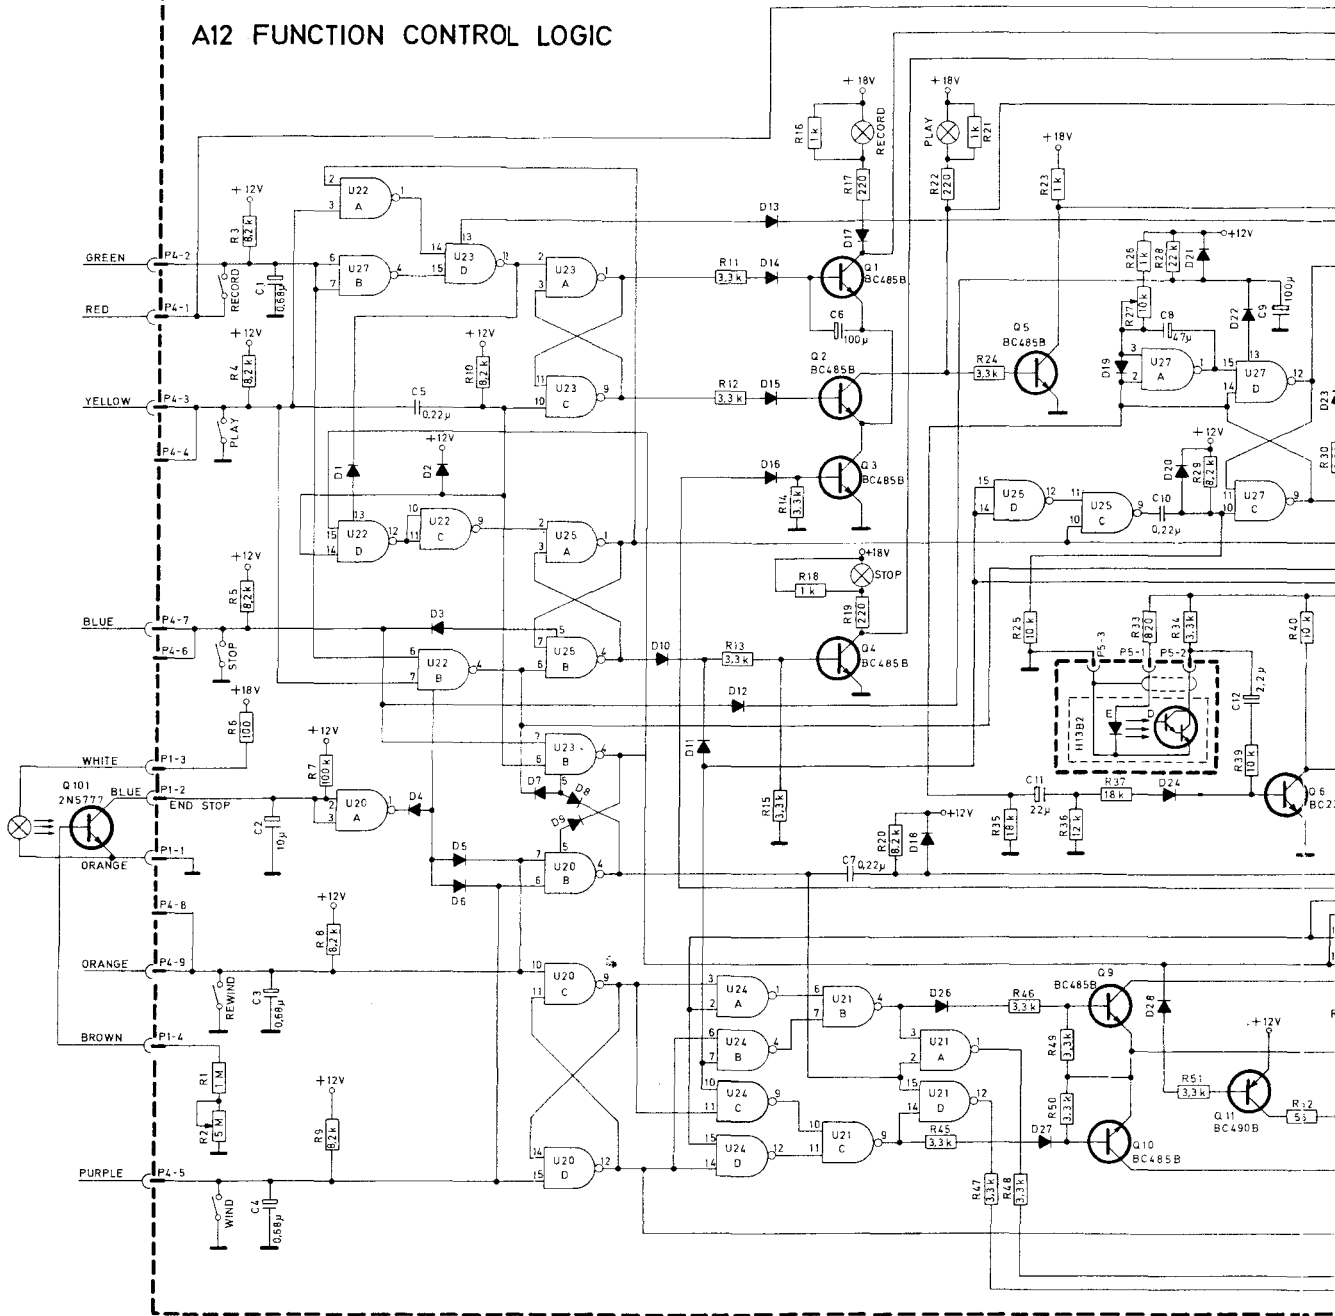

NOTES


1. UNLESS OTHERWISE SPECIFIED RESISTANCE IN OHMS
2. ALL DIODES IN4148 UNLESS OTHERWISE SPECIFIED
3. WHEN REFERRING TO A COMPONENT ON A PRINTED BOARD ASSEMBLY PUT THE ASSY DESIGNATION IN FRONT OF THE COMPONENT REFERENCE DESIGNATION (E.G. SPECIFY A3R1 AND NOT ONLY R1)

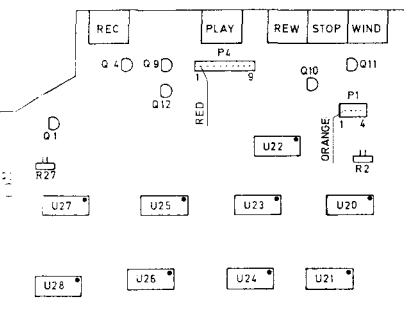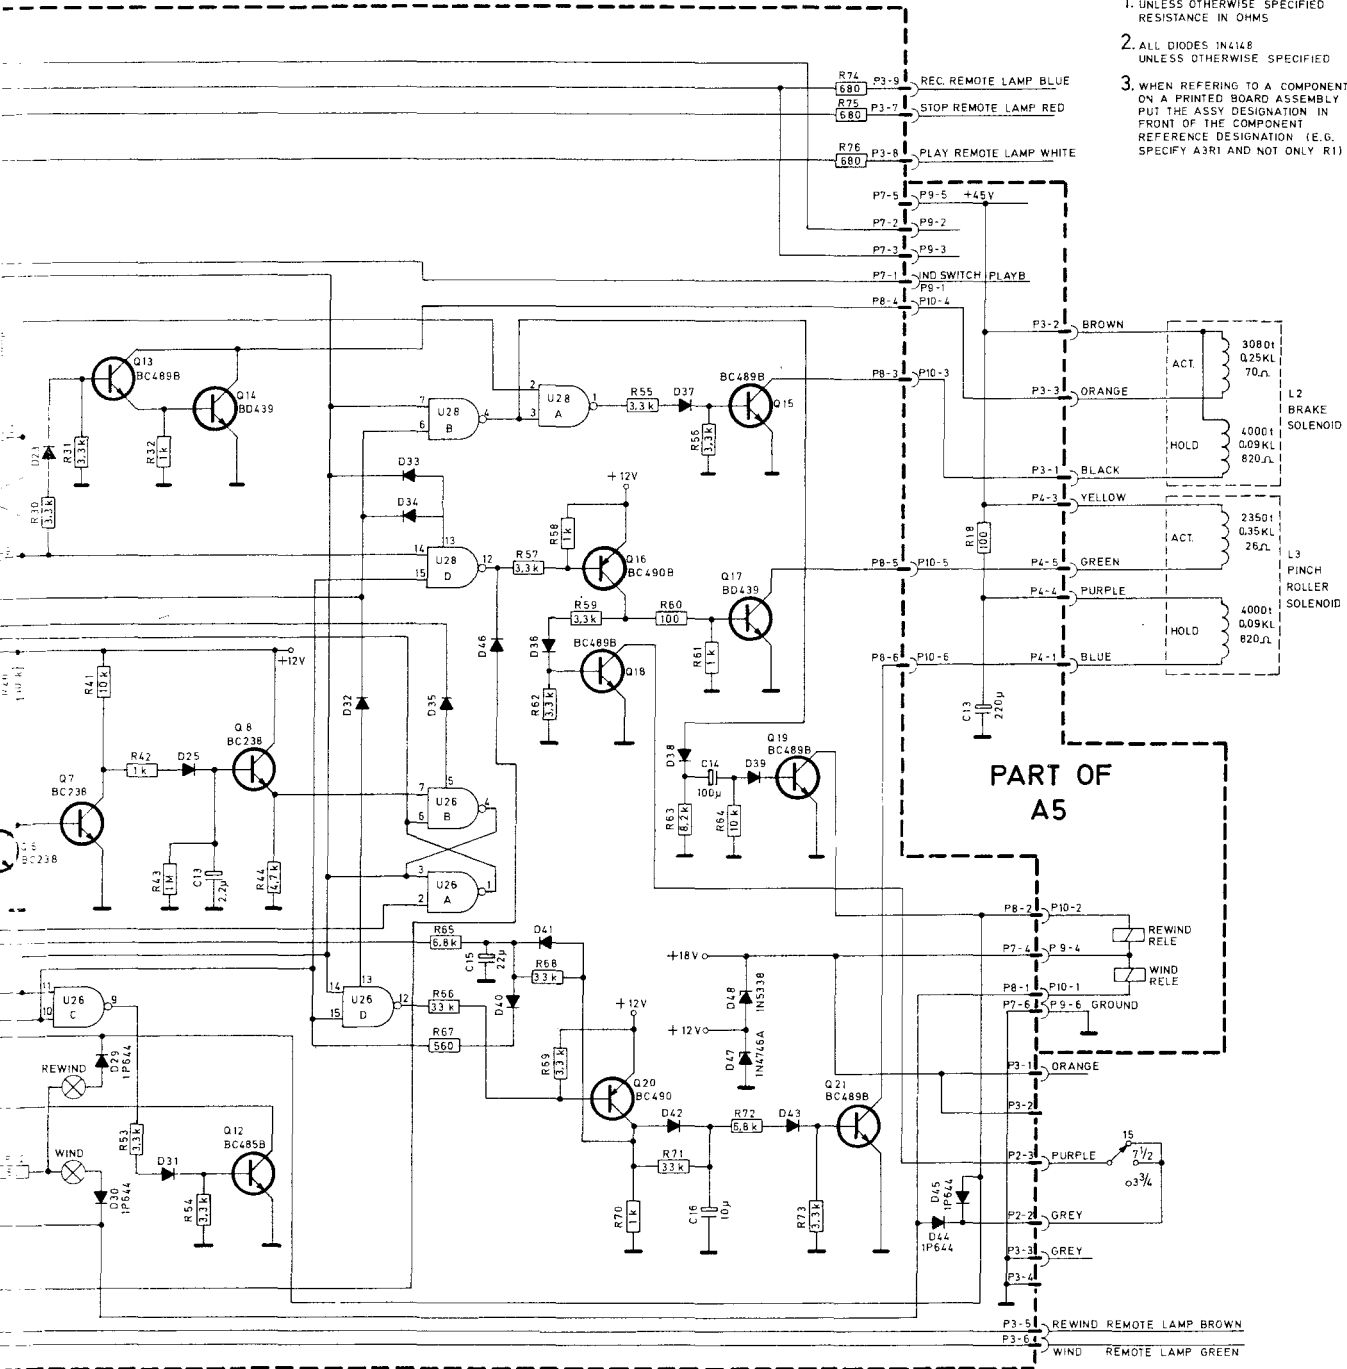


NOTES

1. UNLESS OTHERWISE SPECIFIED RESISTANCE IN OHMS
2. ALL DIODES IN4148 UNLESS OTHERWISE SPECIFIED
3. WHEN REFERRING TO A COMPONENT ON A PRINTED BOARD ASSEMBLY PUT THE ASSY DESIGNATION IN FRONT OF THE COMPONENT REFERENCE DESIGNATION (E.G. SPECIFY A3R1 AND NOT ONLY R1)

CONTROL LOGIC

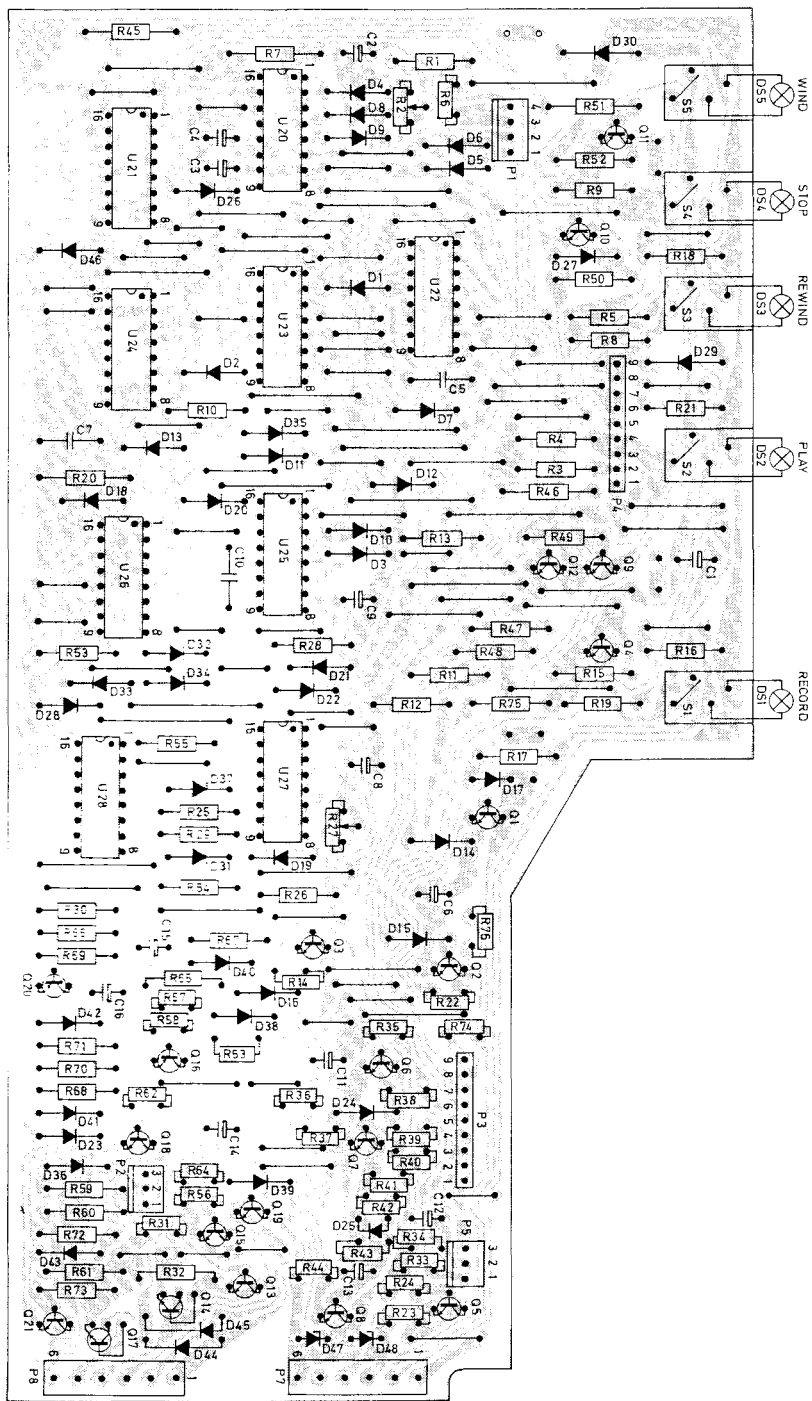

A12 LOGIC BOARD

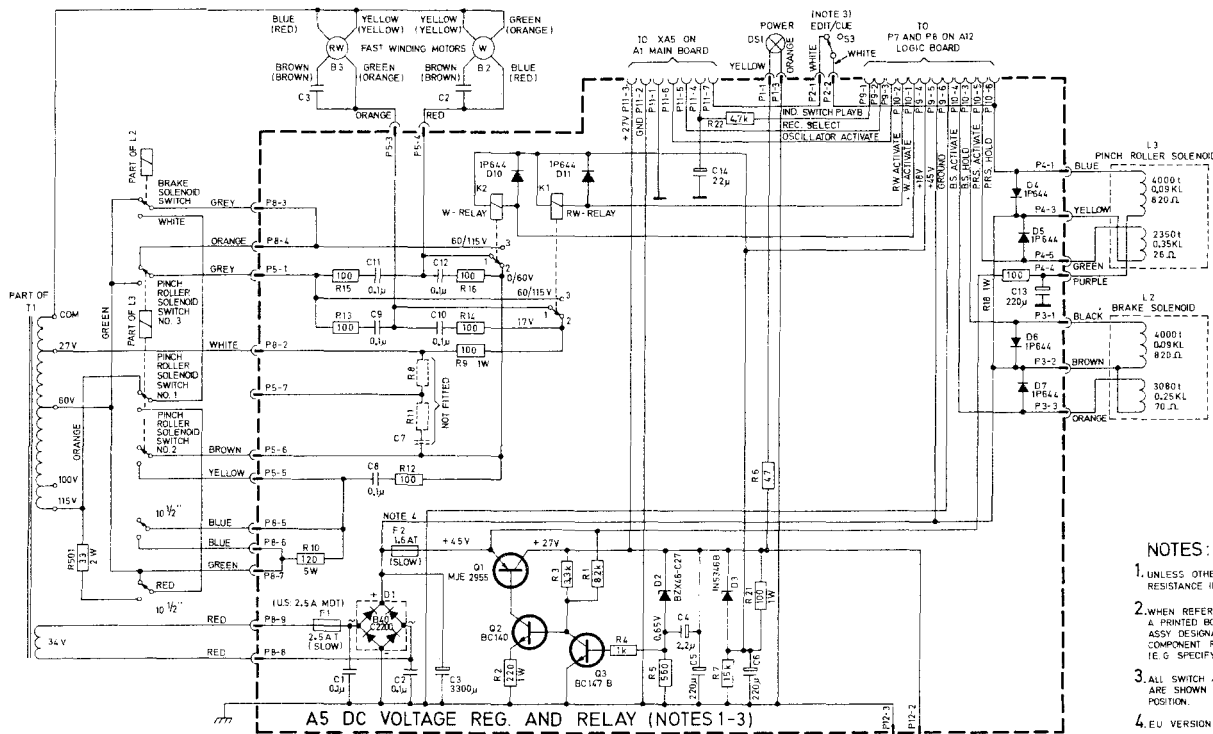


REFERENCE DESIGNATIONS

NO. PREFIX	PREFIX WITH A5	NOT USED
B 2,3	C1-14	C7
C 2,3	D1-7, 11, 12	R8, 11
D 5,1	F2	
L 2,3	K1,2	
S 3,6	P1-5, 8-12	
T 1	Q1-3	
	R1-16, 18, 21, 22,	


ALTERNATIVE WINDING MOTORS

C7 / C3	R10	NOTES
50Hz	120Ω	
60Hz		
R0 20 80-6		
1B 963 RA3	4.3µF	4.3µF
	5µF	5µF

- NOTES:
1. UNLESS OTHERWISE SPECIFIED RESISTANCE IN OHMS
 2. WHEN REFERRING TO A COMPONENT ON A PRINTED BOARD ASSEMBLY PUT THE ASSY DESIGNATION IN FRONT OF THE COMPONENT REFERENCE DESIGNATION (E.G. SPECIFY AS R1, NOT ONLY R1)
 3. ALL SWITCH AND RELAY CONTACTS ARE SHOWN IN THE 'POWER OFF' POSITION
 4. EU VERSION ONLY

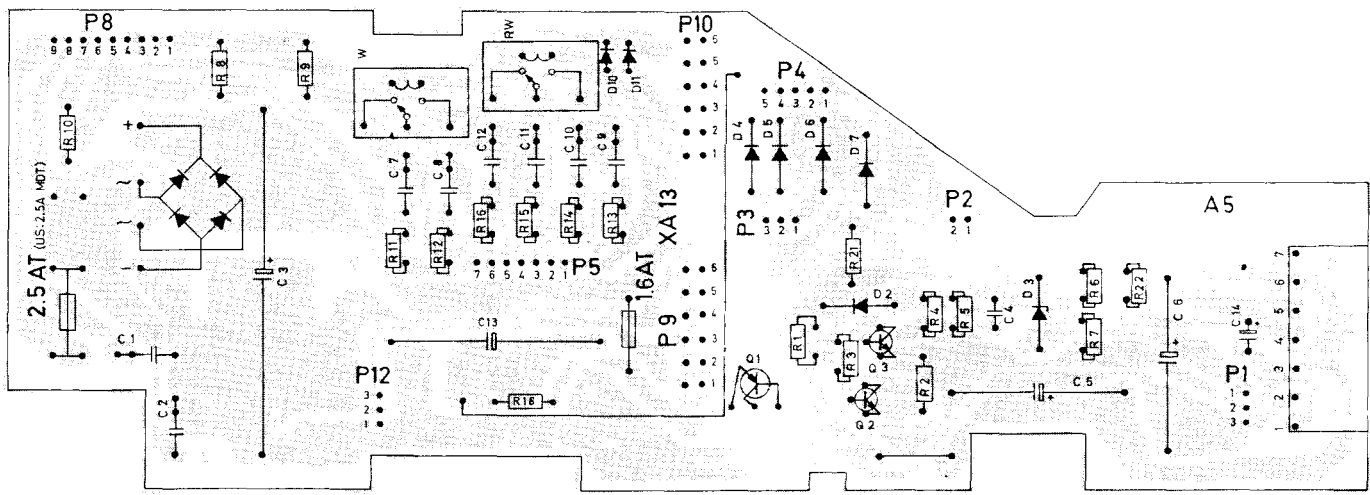

A5 D.C. VOLTAGE REG. AND RELAY CIRCUIT.

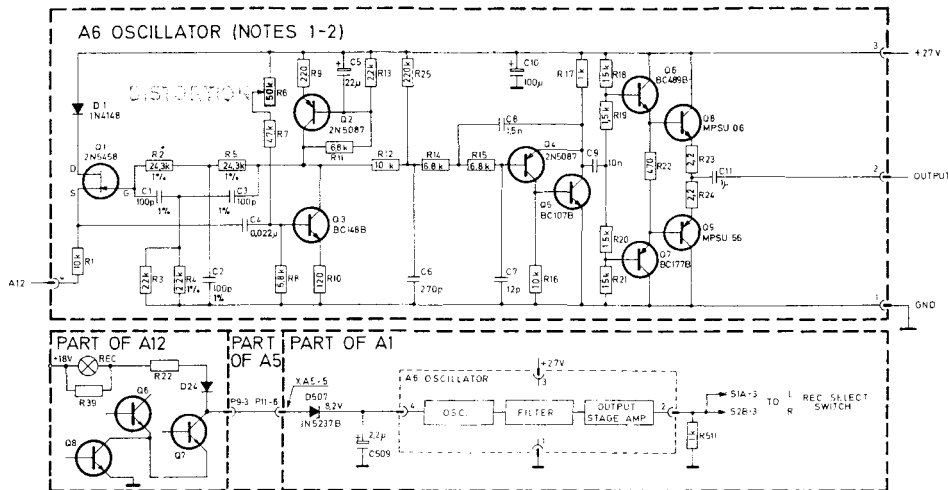



NOTES:

1. UNLESS OTHERWISE SPECIFIED RESISTANCE IN OHMS.
2. WHEN REFERRING TO A COMPONENT ON A PRINTED BOARD ASSEMBLY PUT THE ASSY DESIGNATION IN FRONT OF THE COMPONENT REFERENCE DESIGNATION (E.G. SPECIFY A6R1 AND NOT ONLY R1).

REFERENCE DESIGNATIONS

NO PREFIX WITH A6	NOT USED
C1-11	
Q1-8	
R1-25	

A6 OSCILLATOR BOARD

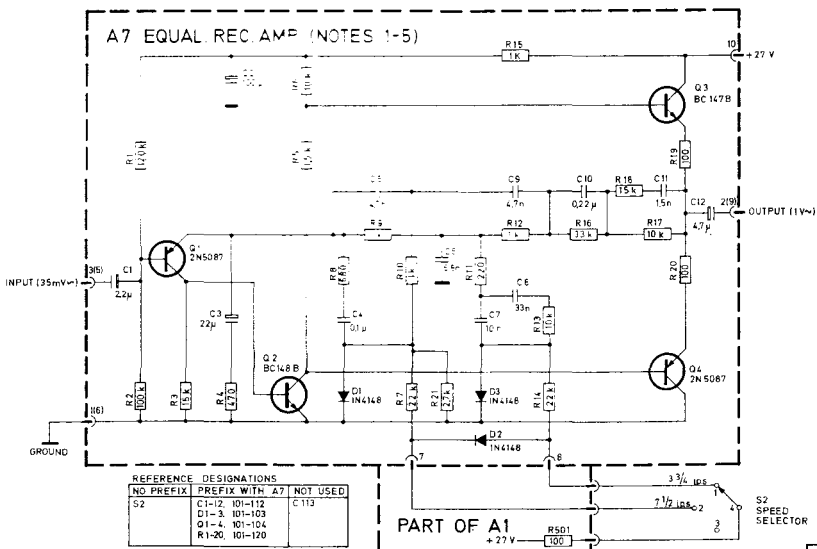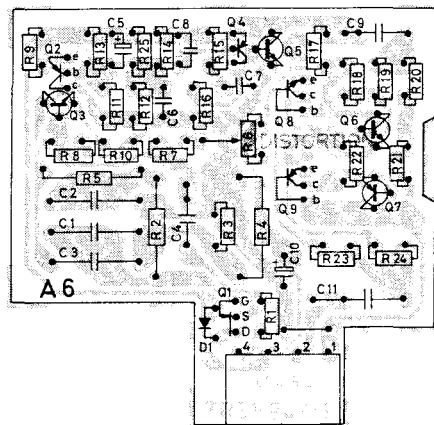

REFERENCE DESIGNATIONS

NO PREFIX	PREFIX WITH A7	NOT USED
S2	C1-12, 101-112	C113
	D1-3, 101-103	
	Q1-4, 101-104	
	R1-20, 101-120	


Modifications.


Component	Value	Changed to:
C4/C104	0.1 μ F	0.047 μ F
R8/R108	680 ohm	1.5 k ohm
C6/C106	6.8n	3.3n
C7/C107	10n	15n

NOTES

1. UNLESS OTHERWISE SPECIFIED RESISTANCE IN OHMS.
2. WHEN REFERRING TO A COMPONENT ON A PRINTED BOARD ASSEMBLY PUT THE ASSY DESIGNATION IN FRONT OF THE COMPONENT REFERENCE DESIGNATION (E.G. SPECIFY A7R1 AND NOT ONLY R1).
3. ONLY THE L-CHANNEL OF THE ASSEMBLY DESIGNATED A7 IS SHOWN.
4. PLUG TERMINAL NOS. FOR THE R-CHANNEL ARE GIVEN IN BRACKETS BESIDE THE L-CHANNEL PLUG TERMINAL NOS.
5. L-CHANNEL HAS 189 AND R-CHANNEL HAS 100-199 AS COMPONENT NOS. WHEN REFERRING TO R-CHANNEL COMPONENTS ADD 100 TO THE L-CHANNEL NOS. (E.G. R17 OF THE L-CHANNEL HAS THE SAME VALUE AS R177 OF THE R-CHANNEL).

A7 EQUAL REC. AMP.

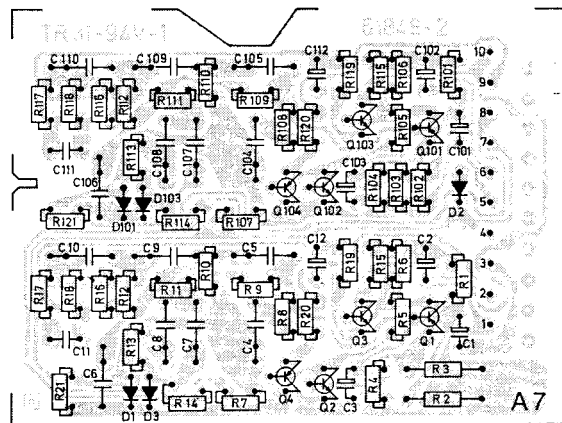


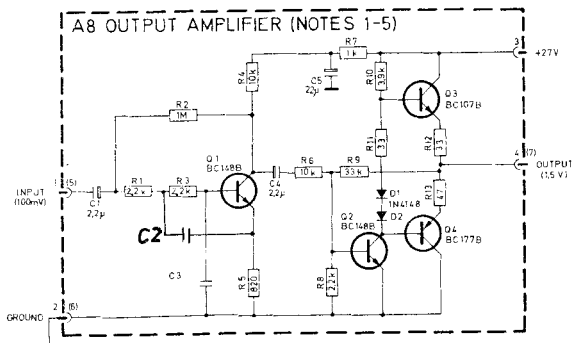


NOTES:

C2 3300pF
C3 1500pF

1. UNLESS OTHERWISE SPECIFIED RESISTANCE IN OHMS.
2. WHEN REFERRING TO A COMPONENT ON A PRINTED BOARD ASSEMBLY PUT THE ASSY DESIGNATION (E.G. SPECIFY A8R1 AND NOT ONLY R1)
3. ONLY THE L-CHANNEL OF THE ASSEMBLY DESIGNATED A8 IS SHOWN.
4. PLUG TERMINAL NO'S FOR THE R-CHANNEL ARE GIVEN IN BRACKETS BESIDE THE L-CHANNEL PLUG TERMINAL NO'S.
5. L-CHANNEL HAS 1-99 AND R-CHANNEL HAS 100-199 AS COMPONENT NO'S WHEN REFERRING TO R-CHANNEL COMPONENTS. ADD 100 TO THE L-CHANNEL NO'S (E.G. R17 OF THE L-CHANNEL HAS THE SAME VALUE AS R177 OF THE R-CHANNEL).

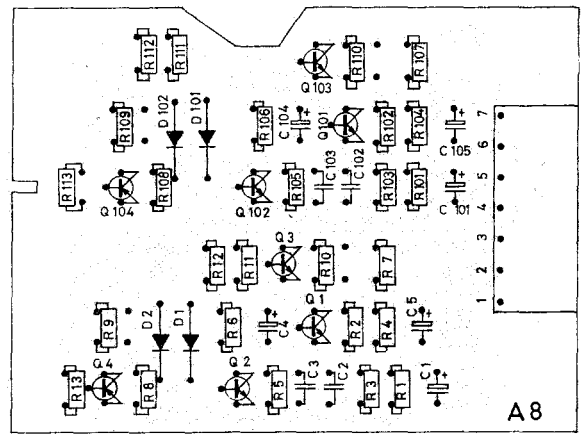


A8 OUTPUT AMPLIFIER


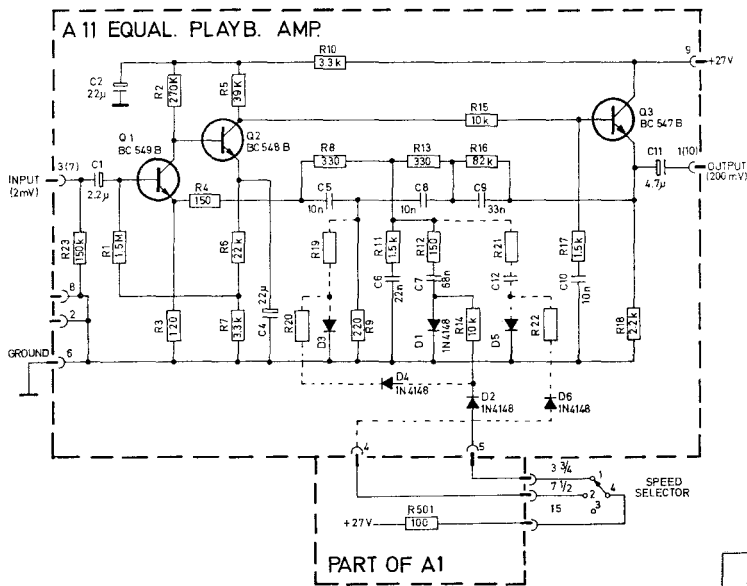


NOTES:

1. UNLESS OTHERWISE SPECIFIED RESISTANCE IN OHMS.
2. WHEN REFERRING TO A COMPONENT ON A PRINTED BOARD ASSEMBLY PUT THE ASSY DESIGNATION IN FRONT OF THE COMPONENT REFERENCE DESIGNATION (E.G. SPECIFY A11R1 AND NOT ONLY R1)
3. ONLY THE L-CHANNEL OF THE ASSEMBLY DESIGNATED A11 IS SHOWN.
4. PLUG TERMINAL NO'S FOR THE R-CHANNEL ARE GIVEN IN BRACKETS BESIDE THE L-CHANNEL PLUG TERMINAL NO'S.
5. L-CHANNEL HAS 1-99 AND R-CHANNEL HAS 100-199 AS COMPONENT NO'S WHEN REFERRING TO R-CHANNEL COMPONENTS. ADD 100 TO THE L-CHANNEL NO'S (E.G. R17 OF THE L-CHANNEL HAS THE SAME VALUE AS R177 OF THE R-CHANNEL).

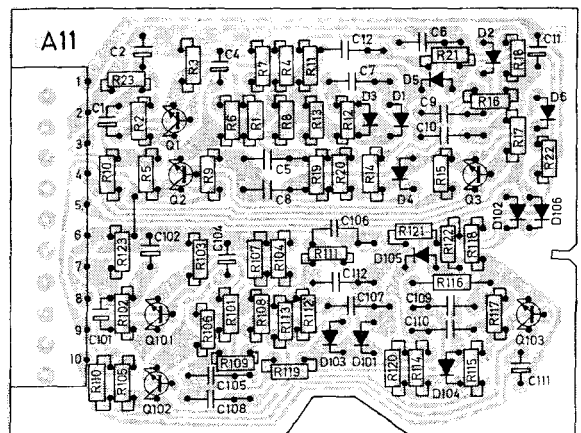


A11 EQUAL PLAYB. AMP.

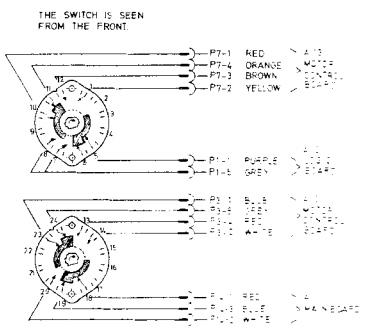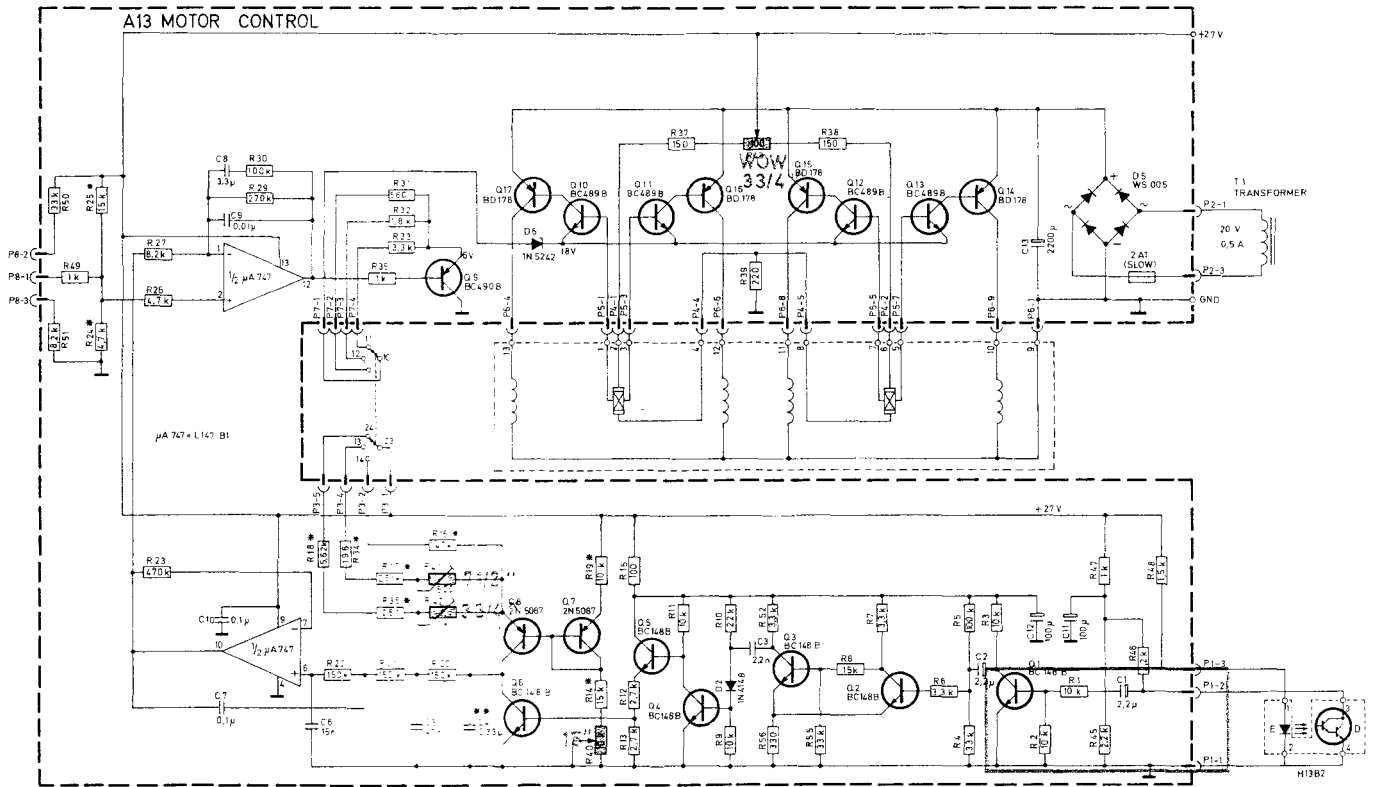


Modifications.

Component	Value	Changed to:
R59	220 ohm	150 ohm, 2W
R57 R38	150 ohm	330 ohm
R32	1.8 k ohm	1.2 k ohm
R33	3.3 k ohm	2.2 k ohm
D5	IN5242	Replace with strap

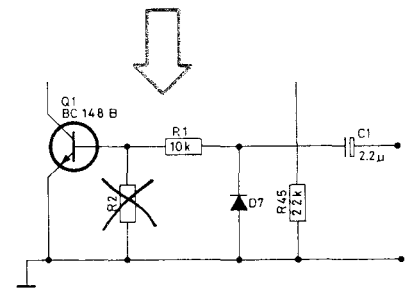

Install D7, 1N4148 between R1 and C1 to ground.
R2 removes.

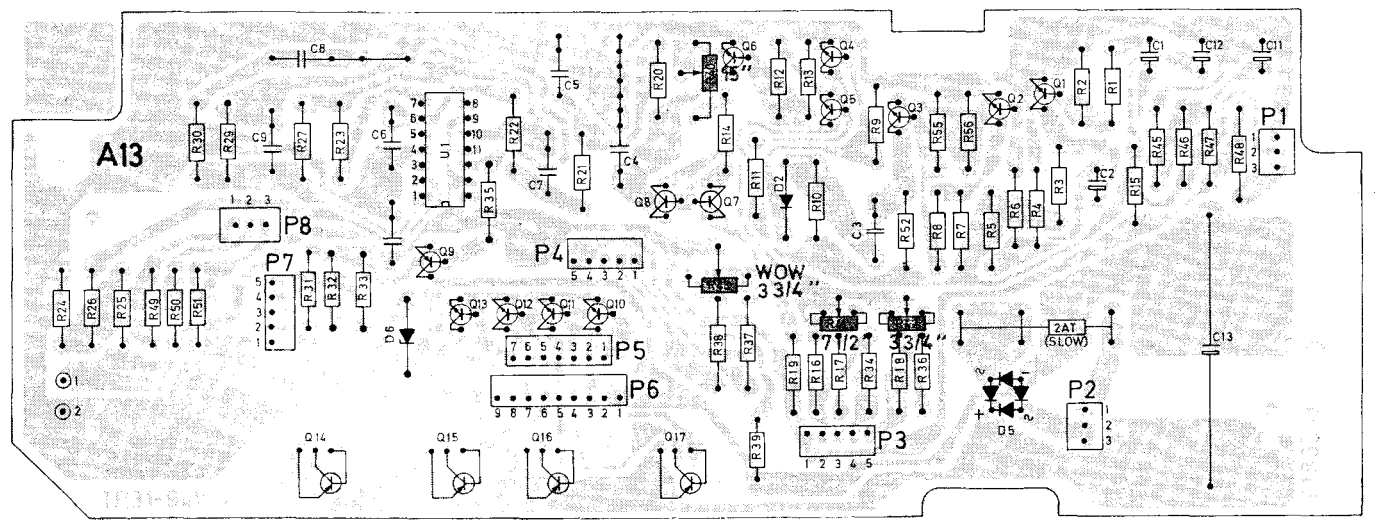

A13 MOTOR CONTROL



TANBERGS RADIOFABRIKK A/S
N – 1301 Sandvika – Norway

TANDBERG

10XD bridges the gap between consumer and professional tape recorders.

Meet the world's first and only 10½" reel tape recorder that operates at 15 ips and combines Tandberg's unique Cross-Field recording technique with the world-famous Dolby* B system. Result: A *guaranteed minimum* signal-to-noise ratio of 72 dB, measured on a 4-track machine using IEC A-weighting. Simply put, the 10XD completely eliminates audible tape hiss!

Here are some of the many sophisticated features that make the 10XD the finest tape recorder Tandberg has ever built:

- 3 speeds: 15, 7½, 3¾ ips. Electronically selected
- 3 motors; Hall-effect capstan motor
- 3 heads; plus separate bias head
- Electronic servo speed control
- Electronic logic mode controls, including photo optics
- Electronic balanced microphone inputs
- Echo, sound-on-sound, editing, A and B tests

- Peak reading meters
- Direct transfer from playback to record (flying start)
- Ferrite playback head with symmetrical balanced output for hum canceling purposes and differential playback amplifier.

Remote control and rack mount optional. Pitch control by special order. For a complete demonstration of this remarkable new advance in stereo tape recording, see your Tandberg dealer.



*Dolby is a trademark of Dolby Laboratories, Inc.

Tandberg of America, Inc., Labriola Court, Armonk, N.Y. 10504
A. Allen Pringle Ltd., Ontario, Canada